

USR-WIFI232-D2 AT Command Set

(Firmware 5.01D.24)

File version: 1.0.0

Content

USR-WIFI232-D2 AT Command Set	1
1. What is the AT command	4
2. How to use the AT command	4
2.1. How to enter AT command mode	4
3. AT command set	4
4. AT command details	6
4.1. AT+E	6
4.2. AT+ENTM	6
4.3. AT+NETP	7
4.4. AT+UART	7
4.5. AT+UARTF	7
4.6. AT+UARTFT	8
4.7. AT+UARTFL	8
4.8. AT+TMODE	8
4.9. AT+WMODE	9
4.10. AT+WSKEY	9
4.11. AT+WSSID	9
4.12. AT+WSLK	10
4.13. AT+WEBU	10
4.14. AT+WAP	10
4.15. AT+WAKEY	11
4.16. AT+MSLP	11
4.17. AT+WSCAN	12
4.18. AT+TCPLK	12
4.19. AT+TCPDIS	12
4.20. AT+WANN	13
4.21. AT+LANN	13
4.22. AT+DHCPGW	13
4.23. AT+TCPTO	14
4.24. AT+MAXSK	14
4.25. AT+TCPB	14
4.26. AT+TCPPTB	14
4.27. AT+TCPADDB	15
4.28. AT+TCPTOB	15
4.29. AT+TCPLKB	15
4.30. AT+EPHYA	15
4.31. AT+EPHYB	16
4.32. AT+RELD	16
4.33. AT+FUDLX	16
4.34. AT+MMID	16
4.35. AT+IDFIR	16

4.36. AT+IDEVE	17
4.37. AT+AABR	17
4.38. AT+DHCPDEN	17
4.39. AT+HIDESSID	18
4.40. AT+DOMAIN	18
4.41. AT+Z	18
4.42. AT+MID	18
4.43. AT+VER	19
4.44. AT+H	19
4.45. AT+WSSSIDA	19
4.46. AT+WSSSIDB	19
4.47. AT+WSSSIDC	20
4.48. AT+WSKEYA	20
4.49. AT+WSKEYB	21
4.50. AT+WSKEYC	21
4.51. AT+WSQY	22
4.52. AT+HTPMODE	22
4.53. AT+HTTPURL	22
4.54. AT+HTTPTP	22
4.55. AT+HTTPPH	23
4.56. AT+HTTPCN	23
4.57. AT+HTTPUA	23
4.58. AT+HTPSV	24
4.59. AT+HTPTP	24
4.60. AT+HTPURL	24
4.61. AT+HTPHEAD	24
4.62. AT+REGEN	25
4.63. AT+REGTCP	25
4.64. AT+REGID	25
4.65. AT+IPBUP	26
4.66. AT+STAPRO	26
5. Contact	27
6. Disclaimer	27
7. Update History	27

1. What is the AT command.

AT command is used for controlling module. You can use AT command to configure and query the settings.

2. How to use the AT command

For USR device is in transparent mode normally, you must enter AT command mode at first. Then you can send AT command to configure or query the settings. After you configure the USR device, you should restart the USR device to make the settings take effect. Every time module restart will work in work mode rather AT command mode.

Every AT command must add character carriage return <CR> and line feed <LF>. In Hex, <CR> is 0x0D <LF> is 0x0A.

2.1. How to enter AT command mode

Please read this FAQ about entering AT command mode.

<http://www.usriot.com/enter-serial-command-mode/>

3. AT command set

Command	Function
E	Set AT command echo enable/disable
ENTM	Exit serial AT command mode and enter work mode
NETP	Query/Set Network protocol parameters of socket A
UART	Query/Set serial port parameters
UARTF	Query/Set Serial package function enable/disable
UARTFT	Query/Set Serial package triggering time
UARTFL	Query/Set Serial package triggering length
TMODE	Query/Set module work mode
WMODE	Query/Set mode of WIFI(AP/STA)
WSKEY	Query/Set encryption parameters in STA mode
WSSID	Query/Set SSID of connected AP
WSLK	Query the connection status in STA mode
WEBU	Query/Set web server username and password
WAP	Query/Set AP mode parameters
WAKEY	Query/Set encryption parameters in AP mode
MSLP	Query/Set Sleep mode enable/disable
WSCAN	Search surrounding AP

TCPLK	Query socket A TCP connection connect/disconnected
TCPDIS	Query/Set establish TCP connection enable/disable(Only take effect in TCP Client mode)
WANN	Query/Set network parameters in STA mode
LANN	Query/Set network parameters in AP mode
DHCPGW	Query/Set DHCP gateway address
TCPTO	Query/Set timeout re-connection function time of socket A
MAXSK	Query/Set maximum TCP Clients in TCP Server work mode
TCPB	Query/Set Socket B enable/disable
TCPPTB	Query/Set Socket B port number
TCPADDB	Query/Set Socket B server address
TCPTOB	Query/Set timeout re-connection function time of socket B
TCPLKB	Query socket B TCP connection connect/disconnected
EPHYA	Set Ethernet interface 1 enable/disable
EPHYB	Set Ethernet interface 2 enable/disable
RELD	Restore user default setting
FUDLX	Set RS485 enable/disable
MMID	Set module ID
IDFIR	Set sending two bytes ID and two bytes ID inverse code after firstly establishing connection enable/disable
IDEVE	Set sending two bytes ID and two bytes ID inverse code before every data enable/disable
AABR	Set baud rate synchronization function enable/disable
DHCPDEN	Set DHCP Server function of LAN port enable/disable
HIDESSID	Set hiding SSID of module in AP mode function enable/disable
DOMAIN	Query/Set web server domain name
Z	Reset the module
MID	Query module ID
VER	Query firmware version
H	Query help information of commands
WSSSIDA	Query/Set first AP SSID in STA mode
WSSSIDB	Query/Set second AP SSID in STA mode
WSSSIDC	Query/Set third AP SSID in STA mode
WSKEYA	Query/Set first AP encryption parameters in STA mode
WSKEYB	Query/Set second AP encryption parameters in STA mode
WSKEYC	Query/Set third AP encryption parameters in STA mode
WSQY	Query/Set RSSI threshold(percentage) to switch among three AP in STA mode
HTPMODE	Query/Set HTTPD Client mode parameters configuring way(new/old)
HTTPURL	Query/Set HTTP Server address and port in HTTPD Client mode old configuring way

HTTPTP	Query/Set HTTP requesting method in HTTPD Client mode old configuring way
HTTTPH	Query/Set HTTP header path in HTTPD Client mode old configuring way
HTTPCN	Query/Set HTTP header connection in HTTPD Client mode old configuring way
HTTPUA	Query/Set HTTP header User-Agent in HTTPD Client mode old configuring way
HTPSV	Query/Set HTTP Server Address and Port in HTTPD Client mode new configuring way
HTPTP	Query/Set HTTP requesting method in HTTPD Client mode new configuring way
HTPURL	Query/Set HTTP URL in HTTPD Client mode new configuring way
HTPHEAD	Query/Set HTTP header in HTTPD Client mode new configuring way
REGEN	Query/Set identity packet type
REGTCP	Query/Set identity packet sending method
REGID	Query/Set identity packet ID
IPBUP	Query/Set domain name resolution IP backup function enable/disable
STAPRO	Query/Set smart STA function enable/disable

4. AT command details

Special Characters		
Character	Note	Hex
<CR>	Carriage Return	0x0D
<LF>	Line Feed	0x0A

4.1. AT+E

Format	
Set	AT+E<CR>
Return	<CR><LF>+ok<CR><LF>

Note: Default setting of echo function is on, user can send above command to close, then send above command again to open.

4.2. AT+ENTM

Format	
Set	AT+ENTM<CR>
Return	<CR><LF>+ok<CR><LF>

4.3.AT+NETP

Parameter	Description	Default Value	Range
<Protocol>	Network protocol of Socket A	TCP	TCP/UDP
<CS>	Network mode of Socket A	Server	Server/Client
<Port>	Port number of Socket A	8899	Less than 65535
<Address>	Remote Server address of Socket A in client mode	10.10.100.100	0.0.0.0~255.255.255.255
			Domain name
Format			
Query	AT+NETP<CR>		
Return	<CR><LF>+ok=<Protocol>,<CS>,<Port>,<Address><CR><LF>		
Set	AT+NETP=<Protocol>,<CS>,<Port>,<Address><CR>		
Return	<CR><LF>+ok<CR><LF>		

Note: When Socket A work in TCP Server or UDP Server, port can't be 80(HTTP port), 8000(websocket port), 49000(usr-link port).

4.4.AT+UART

Parameter	Description	Default Value	Range
<Baud rate>	Baud rate	57600	300, 600, 1200,1800, 2400, 4800, 9600, 19200, 38400, 57600, 115200, 230400, 345600, 460800
<Data bits>	Data bits	8	5, 6, 7, 8
<Stop bits>	Stop bits	1	1,2
<Parity>	Parity	NONE	NONE, EVEN, ODD, MARK, SPACE
<Flow Control>	Flow Control	NFC	NFC: No flow control
			FC: Hardware flow control(RTS/CTS)
Format			
Query	AT+UART<CR>		
Return	<CR><LF>+ok=<Baud rate>,<Data bits>,<Stop bits>,<Parity><Flow Control><CR><LF>		
Set	AT+UART=<Baud rate>,<Data bits>,<Stop bits>,<Parity><Flow Control><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.5.AT+UARTF

Parameter	Description	Default Value	Range
<Status>	Status of Serial package function	disable	enable/disable

Format	
Query	AT+UARTF<CR>
Return	<CR><LF>+ok=<Status><CR><LF>
Set	AT+UARTF=<Status><CR>
Return	<CR><LF>+ok<CR><LF>

4.6. AT+UARTFT

Parameter	Description	Default Value	Range
<Time>	Serial package triggering time	500ms	100~10000ms
Format			
Query	AT+UARTFT<CR>		
Return	<CR><LF>+ok=<Time><CR><LF>		
Set	AT+UARTFT=<Time><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.7. AT+UARTFL

Parameter	Description	Default Value	Range
<Length>	Serial package triggering length	512 bytes	16~4096 bytes
Format			
Query	AT+UARTFL<CR>		
Return	<CR><LF>+ok=<Length><CR><LF>		
Set	AT+UARTFL=<Length><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.8. AT+TMODE

Parameter	Description	Default Value	Range
<Mode>	Module data transmission mode	Through	Through: Transparent Transmission mode
			Agreement: Serial port command mode
			GPIO: GPIO mode
			Httpdclient: HTTPD Client mode
			Modbus: Modbus TCP <=>Modbus RTU mode
Format			
Query	AT+TMODE<CR>		
Return	<CR><LF>+ok=<Mode><CR><LF>		
Set	AT+TMODE=<Mode><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.9. AT+WMODE

Parameter	Description	Default Value	Range
<Mode>	WIFI mode of module	AP	AP/STA
Format			
Query	AT+WMODE<CR>		
Return	<CR><LF>+ok=<Mode><CR><LF>		
Set	AT+WMODE=<Mode><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.10. AT+WSKEY

Parameter	Description	Default Value	Range
<AUTH>	Authentication mode	OPEN	OPEN
			WPAPSK
			WPA2PSK
			SHARED
<Encryption>	Encryption algorithm	NONE	NONE: Take effect in <AUTH>=OPEN
			TKIP/AES: Take effect in <AUTH>=WPAPSK or WPA2PSK
			WEP-A/WEP-H: Take effect in <AUTH>=SHARED or OPEN(H means HEX, A means ASCII)
<Password>	Password	No default value	<AUTH>= WPAPSK/WPA2PSK: ASCII format, 8~63 bytes
			<Encryption>=WEP-A: ASCII format, 5 or 13 bytes
			<Encryption>=WEP-H: HEX format, 10 or 26 bytes
Format			
Query	AT+WSKEY<CR>		
Return	<CR><LF>+ok=<AUTH>,<Encryption>,<Password><CR><LF>		
Set	AT+WSKEY=<AUTH>,<Encryption>,<Password><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.11. AT+WSSSID

Parameter	Description	Range
<SSID>	SSID of connected AP	Less than 32 bytes

Format	
Query	AT+WSSSID<CR>
Return	<CR><LF>+ok=<SSID><CR><LF>
Set	AT+WSSSID=<SSID><CR>
Return	<CR><LF>+ok<CR><LF>

4.12. AT+WSLK

Parameter	Description	Range
<Status>	Connection status of module in STA mode	Disconnected: No connection with any AP
		SSID of connected AP if connected
		RF Off: Close WIFI
Format		
Query	AT+WSLK<CR>	
Return	<CR><LF>+ok=<Status><CR><LF>	

4.13. AT+WEBU

Parameter	Description	Default Value	Range
<Username>	Username of web server	admin	Less than 16 bytes
<Password>	Password of web server	admin	Less than 16 bytes
Format			
Query	AT+WEBU<CR>		
Return	<CR><LF>+ok=<Username>,<Password><CR><LF>		
Set	AT+WEBU=<Username>,<Password><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.14. AT+WAP

Parameter	Description	Default Value	Range
<Mode>	WIFI mode	11BGN	11B/11BG/11BGN/11G/11N
<SSID>	SSID in AP mode		Less than 32 bytes
<Channel>	WIFI channel	Auto	Auto/CH1~CH11
Format			
Query	AT+WAP<CR>		
Return	<CR><LF>+ok=<Mode>,<SSID>,<Channel><CR><LF>		
Set	AT+WAP=<Mode>,<SSID>,<Channel><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.15. AT+WAKEY

Parameter	Description	Default Value	Range
<AUTH>	Authentication mode	OPEN	OPEN
			SHARED
			WPAPSK
			WPA2PSK
<Encryption>	Encryption algorithm	NONE	NONE: Take effect in <AUTH>=OPEN
			WEP-A/WEP-H: Take effect in <AUTH>=SHARED or OPEN(H means HEX, A means ASCII)
			TKIP/AES/TKIPAES: Take effect in <AUTH>= WPAPSK/WPA2PSK
<Password>	Password	No default value	<AUTH>= WPAPSK/WPA2PSK: ASCII format, 8~63 bytes
			<Encryption>=WEP-A: ASCII format, 5 or 13 bytes
			<Encryption>=WEP-H: HEX format, 10 or 26 bytes
Format			
Query	AT+WAKEY<CR>		
Return	<CR><LF>+ok=<AUTH>,<Encryption>,<Password><CR><LF>		
Set	AT+WAKEY=<AUTH>,<Encryption>,<Password><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.16. AT+MSLP

Parameter	Description	Default Value	Range
<Status>	Status of sleep mode	ON	ON: Exit sleep mode
			OFF: Enter sleep mode
Format			
Query	AT+MSLP<CR>		
Return	<CR><LF>+ok=<Status><CR><LF>		
Set	AT+MSLP=<Status><CR>		
Return	<CR><LF>+ok<CR><LF>		

Note: When module enter sleep mode and user send AT+MSLP=ON to exit sleep mode, module will enter AT command mode.

4.17. AT+WSCAN

Parameter	Description
<RSSI>	RSSI of AP that be searched by module
<SSID>	AP's SSID that be searched by module
<BSSID>	MAC address of AP that be searched by module
<Channel>	WIFI network channel
<Encryption>	Encryption algorithm of AP that searched by module
<Authentication>	Authentication mode of AP that searched by module
Format	
Query	AT+WSCAN<CR>
Return	<CR><LF>+ok=<LF><CR>RSSI,SSID,BSSID,Channel,Encryption,Authentication<LF><CR><RSSI1><SSID1>,<BSSID1>,<Channel1>,<Encryption1>,<Authentication1><LF><CR><RSSI2><SSID2>,<BSSID2>,<Channel2>,<Encryption2>,<Authentication2><LF><CR>.....<LF><CR><RSSIN><SSIDN>,<BSSIDN>,<ChannelN>,<EncryptionN>,<AuthenticationN><CR><LF>

4.18. AT+TCPLK

Parameter	Description	Range
<Status>	Status of TCP connection of Socket A	on: TCP connection connected
		off: TCP connection disconnected
Format		
Query	AT+TCPLK<CR>	
Return	<CR><LF>+ok=<Status><CR><LF>	

4.19. AT+TCPDIS

Parameter	Description	Default Value	Range
<Status>	Allowing establishing TCP connection in TCP Client mode	on	on: Allow connecting, after setting to on, starting to connect to server immediately
			off: Disallow connecting, after setting to off, disconnecting immediately and not to reconnect
Format			
Query	AT+TCPDIS<CR>		
Return	<CR><LF>+ok=<Status><CR><LF>		
Set	AT+TCPDIS=<Status><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.20. AT+WANN

Parameter	Description	Default Value	Range
<Mode>	How to get IP address in STA mode	DHCP	static/DHCP
<IP address>	IP address in STA mode	0.0.0.0	0.0.0.0~255.255.255.255
<Mask>	Subnet mask in STA mode	0.0.0.0	0.0.0.0~255.255.255.255
<Gateway>	Gateway address in STA mode	0.0.0.0	0.0.0.0~255.255.255.255
Format			
Query	AT+WANN<CR>		
Return	<CR><LF>+ok=<Mode>,<IP address>,<Mask>,<Gateway><CR><LF>		
Set	AT+WANN=<Mode>,<IP address>,<Mask>,<Gateway><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.21. AT+LANN

Parameter	Description	Default Value	Range
<IP address>	IP address of module in AP mode	10.10.100.254	0.0.0.0~255.255.255.255
<Mask>	Subnet mask of module in AP mode	255.255.255.0	0.0.0.0~255.255.255.255
Format			
Query	AT+LANN<CR>		
Return	<CR><LF>+ok=<IP address>,<Mask><CR><LF>		
Set	AT+LANN=<IP address>,<Mask><CR>		
Return	<CR><LF>+ok<CR><LF>		

Note: WAN port IP and LAN port IP can't in same network segment.

4.22. AT+DHCPGW

Parameter	Description	Default Value	Range
<Address>	DHCP gateway address	10.10.100.254	0.0.0.0~255.255.255.255
Format			
Query	AT+DHCPGW<CR>		
Return	<CR><LF>+ok=<Address><CR><LF>		
Set	AT+DHCPGW=<Address><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.23. AT+TCPTO

Parameter	Description	Default Value	Range
<Time>	Timeout re-connection time of socket A	0	0-600s
			0 (Close function)
Format			
Query	AT+TCPTO<CR>		
Return	<CR><LF>+ok=<Time><CR><LF>		
Set	AT+TCPTO=<Time><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.24. AT+MAXSK

Parameter	Description	Default Value	Range
<NUM>	Maximum TCP Clients that module support in TCP Server	32	1~32
Format			
Query	AT+MAXSK<CR>		
Return	<CR><LF>+ok=<NUM><CR><LF>		
Set	AT+MAXSK=<NUM><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.25. AT+TCPB

Parameter	Description	Default Value	Range
<Status>	Status of socket B	on	on/off
Format			
Query	AT+TCPB<CR>		
Return	<CR><LF>+ok=<Status><CR><LF>		
Set	AT+TCPB=<Status><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.26. AT+TCPPTB

Parameter	Description	Default Value	Range
<Port>	Port number of Socket B	18899	1~65535
Format			
Query	AT+TCPPTB<CR>		
Return	<CR><LF>+ok=<Port><CR><LF>		
Set	AT+TCPPTB=<Port><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.27. AT+TCPADDB

Parameter	Description	Default Value	Range
<Address>	Remote Server address of Socket B	10.10.100.100	0.0.0.0~255.255.255.255
			Domain name
Format			
Query	AT+TCPADDB<CR>		
Return	<CR><LF>+ok=<Address><CR><LF>		
Set	AT+TCPADDB=<Address><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.28. AT+TCPTOB

Parameter	Description	Default Value	Range
<Time>	Timeout re-connection time of socket B	0	0-600s
			0 (Close function)
Format			
Query	AT+TCPTOB<CR>		
Return	<CR><LF>+ok=<Time><CR><LF>		
Set	AT+TCPTOB=<Time><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.29. AT+TCPLKB

Parameter	Description	Range
<Status>	Status of TCP connection of Socket B	on: TCP connection connected
		off: TCP connection disconnected
Format		
Query	AT+TCPLKB<CR>	
Return	<CR><LF>+ok=<Status><CR><LF>	

4.30. AT+EPHYA

Format	
Set	AT+EPHYA=on/off<CR>
Return	<CR><LF>+ok<CR><LF>

Note: Default of Ethernet interface 1 is on.

4.31. AT+EPHYB

Format	
Set	AT+EPHYB=on/off<CR>
Return	<CR><LF>+ok<CR><LF>

Note: Default of Ethernet interface 2 is on.

User can also use AT+FVEW=disable/enable to set Ethernet interface in LAN port(disable) or WAN port(enable). This command will take effect after restoring default settings.

4.32. AT+RELD

Format	
Set	AT+RELD<CR>
Return	<CR><LF>+ok=rebooting...<CR><LF>

4.33. AT+FUDLX

Parameter	Description	Range
<Status>	Status of RS485 function	on/off
Format		
Set	AT+FUDLX=<Status><CR>	
Return	<CR><LF>+ok<CR><LF>	

Note: Default of RS485 is off and this command will take effect after restoring default settings.

4.34. AT+MMID

Parameter	Description	Range
<ID>	Module ID	0~65535
Format		
Query	AT+MMID<CR>	
Return	<CR><LF>+ok=<ID><CR><LF>	
Set	AT+MMID=<ID><CR>	
Return	<CR><LF>+ok<CR><LF>	

4.35. AT+IDFIR

Parameter	Description	Default	Range
<Status>	Status of sending two bytes ID and two bytes ID inverse code after firstly establishing connection function	off	on/off

Format	
Query	AT+IDFIR<CR>
Return	<CR><LF>+ok=<Status><CR><LF>
Set	AT+IDFIR=<Status><CR>
Return	<CR><LF>+ok<CR><LF>

4.36. AT+IDEVE

Parameter	Description	Default	Range
<Status>	Status of sending two bytes ID and two bytes ID inverse code before every data function	off	on/off
Format			
Query	AT+IDEVE<CR>		
Return	<CR><LF>+ok=<Status><CR><LF>		
Set	AT+IDEVE=<Status><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.37. AT+AABR

Parameter	Description	Default	Range
<Status>	Status of baud rate synchronization function	on	on/off
Format			
Query	AT+AABR<CR>		
Return	<CR><LF>+ok=<Status><CR><LF>		
Set	AT+AABR=<Status><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.38. AT+DHCPDEN

Parameter	Description	Default	Range
<Status>	Status of LAN port DHCP Server function	on	on/off
Format			
Query	AT+DHCPDEN<CR>		
Return	<CR><LF>+ok=<Status><CR><LF>		
Set	AT+DHCPDEN=<Status><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.39. AT+HIDESSID

Parameter	Description	Default	Range
<Status>	Status of hiding SSID of module in AP mode function	off	on/off
Format			
Query	AT+HIDESSID<CR>		
Return	<CR><LF>+ok=<Status><CR><LF>		
Set	AT+HIDESSID=<Status><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.40. AT+DOMAIN

Parameter	Description	Default
<Name>	Domain name to enter module web server	USR-WIFI232-AP
Format		
Query	AT+DOMAIN<CR>	
Return	<CR><LF>+ok=<Name><CR><LF>	
Set	AT+DOMAIN=<Name><CR>	
Return	<CR><LF>+ok<CR><LF>	

4.41. AT+Z

Format	
Set	AT+Z<CR>
Return	<CR><LF>+ok<CR><LF>

4.42. AT+MID

Parameter	Description
<MID>	Module MID, format: A11-yymmddnnnn. yymmdd means produced date year/month/day. nnnn means production series number
Format	
Query	AT+MID<CR>
Return	<CR><LF>+ok=<MID><CR><LF>

4.43. AT+VER

Parameter	Description
<VER>	Firmware version of the module
Format	
Query	AT+VER<CR>
Return	<CR><LF>+ok=<VER><CR><LF>

4.44. AT+H

Parameter	Description
<Help>	Command help information
Format	
Query	AT+H<CR>
Return	<CR><LF>+ok=<Help><CR><LF>

4.45. AT+WSSSIDA

Parameter	Description
<SSID>	First AP SSID which module want to connect in STA mode
Format	
Query	AT+WSSSIDA<CR>
Return	<CR><LF>+ok=<SSID><CR><LF>
Set	AT+WSSSIDA=<SSID><CR>
Return	<CR><LF>+ok<CR><LF>

4.46. AT+WSSSIDB

Parameter	Description
<SSID>	Second AP SSID which module want to connect in STA mode
Format	
Query	AT+WSSSIDB<CR>
Return	<CR><LF>+ok=<SSID><CR><LF>
Set	AT+WSSSIDB=<SSID><CR>
Return	<CR><LF>+ok<CR><LF>

4.47. AT+WSSSIDC

Parameter	Description
<SSID>	Third AP SSID which module want to connect in STA mode
Format	
Query	AT+WSSSIDC<CR>
Return	<CR><LF>+ok=<SSID><CR><LF>
Set	AT+WSSSIDC=<SSID><CR>
Return	<CR><LF>+ok<CR><LF>

4.48. AT+WSKEYA

Parameter	Description	Range
<AUTH>	Authentication mode	OPEN
		WPAPSK
		WPA2PSK
		SHARED
<Encryption>	Encryption algorithm	NONE: Take effect in <AUTH>=OPEN
		TKIP/AES: Take effect in <AUTH>=WPAPSK or WPA2PSK
		WEP-A/WEP-H: Take effect in <AUTH>=OPEN or <AUTH>=SHARED(H means HEX, A means ASCII)
<Password>	Password	<AUTH>= WPAPSK/WPA2PSK: ASCII format, 8~63 bytes
		<Encryption>=WEP-A: ASCII format, 5 or 13 bytes
		<Encryption>=WEP-H: HEX format, 10 or 26 bytes
Format		
Query	AT+WSKEYA<CR>	
Return	<CR><LF>+ok=<AUTH>,<Encryption>,<Password><CR><LF>	
Set	AT+WSKEYA=<AUTH>,<Encryption>,<Password><CR>	
Return	<CR><LF>+ok<CR><LF>	

Note: Above is first AP encryption parameters which module want to connect in STA mode.

4.49. AT+WSKEYB

Parameter	Description	Range
<AUTH>	Authentication mode	OPEN
		WPAPSK
		WPA2PSK
		SHARED
<Encryption>	Encryption algorithm	NONE: Take effect in <AUTH>=OPEN
		TKIP/AES: Take effect in <AUTH>=WPAPSK or WPA2PSK
		WEP-A/WEP-H: Take effect in <AUTH>=OPEN or <AUTH>=SHARED(H means HEX, A means ASCII)
<Password>	Password	<AUTH>= WPAPSK/WPA2PSK: ASCII format, 8~63 bytes
		<Encryption>=WEP-A: ASCII format, 5 or 13 bytes
		<Encryption>=WEP-H: HEX format, 10 or 26 bytes
Format		
Query	AT+WSKEYB<CR>	
Return	<CR><LF>+ok=<AUTH>,<Encryption>,<Password><CR><LF>	
Set	AT+WSKEYB=<AUTH>,<Encryption>,<Password><CR>	
Return	<CR><LF>+ok<CR><LF>	

Note: Above is second AP encryption parameters which module want to connect in STA mode.

4.50. AT+WSKEYC

Parameter	Description	Range
<AUTH>	Authentication mode	OPEN
		WPAPSK
		WPA2PSK
		SHARED
<Encryption>	Encryption algorithm	NONE: Take effect in <AUTH>=OPEN
		TKIP/AES: Take effect in <AUTH>=WPAPSK or WPA2PSK
		WEP-A/WEP-H: Take effect in <AUTH>=OPEN or <AUTH>=SHARED(H means HEX, A means ASCII)
<Password>	Password	<AUTH>= WPAPSK/WPA2PSK: ASCII format, 8~63 bytes
		<Encryption>=WEP-A: ASCII format, 5 or 13 bytes
		<Encryption>=WEP-H: HEX format, 10 or 26 bytes
Format		
Query	AT+WSKEYC<CR>	
Return	<CR><LF>+ok=<AUTH>,<Encryption>,<Password><CR><LF>	

Set	AT+WSKEYC=<AUTH>,<Encryption>,<Password><CR>
Return	<CR><LF>+ok<CR><LF>

Note: Above is third AP encryption parameters which module want to connect in STA mode.

4.51. AT+WSQY

Parameter	Description	Default Value	Range
<Ret>	RSSI threshold(percentage)	100	0~100. 100: Not to automatically switch AP
Format			
Query	AT+WSQY<CR>		
Return	<CR><LF>+ok=<Ret><CR><LF>		
Set	AT+WSQY=<Ret><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.52. AT+HTPMODE

Parameter	Description	Default Value	Range
<Type>	HTTPD Client configuring mode	new	new/old
Format			
Query	AT+HTPMODE<CR>		
Return	<CR><LF>+ok=<Type><CR><LF>		
Set	AT+HTPMODE=<Type><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.53. AT+HTTPURL

Parameter	Description	Default Value	Range
<Address>	Server Address	10.10.100.200	IP address: 0.0.0.0~255.255.255.255
			Server address: 1-64 BYTES
<Port>	Server Port	80	0-65535
Format			
Query	AT+HTTPURL<CR>		
Return	<CR><LF>+ok=<Address>,<Port><CR><LF>		
Set	AT+HTTPURL=<Address>,<Port><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.54. AT+HTTPTP

Parameter	Description	Default Value	Range
<Method>	HTTPD requesting method	GET	GET/PUT/POST

Format	
Query	AT+HTTPTP<CR>
Return	<CR><LF>+ok=<Method><CR><LF>
Set	AT+HTTPTP=<Method><CR>
Return	<CR><LF>+ok<CR><LF>

4.55. AT+HTTTPH

Parameter	Description	Default Value
<Path>	HTTPD header path	/abcd
Format		
Query	AT+HTTTPH<CR>	
Return	<CR><LF>+ok=<Path><CR><LF>	
Set	AT+HTTTPH=<Path><CR>	
Return	<CR><LF>+ok<CR><LF>	

4.56. AT+HTTPCN

Parameter	Description	Default Value
<Connection>	HTTPD header connection	keep-alive
Format		
Query	AT+HTTPCN<CR>	
Return	<CR><LF>+ok=<Connection><CR><LF>	
Set	AT+HTTPCN=<Connection><CR>	
Return	<CR><LF>+ok<CR><LF>	

4.57. AT+HTTPIUA

Parameter	Description	Default Value
< User-Agent>	HTTPD header User-Agent	lwip1.3.2
Format		
Query	AT+HTTPIUA<CR>	
Return	<CR><LF>+ok=< User-Agent><CR><LF>	
Set	AT+HTTPIUA=< User-Agent><CR>	
Return	<CR><LF>+ok<CR><LF>	

4.58. AT+HTPSV

Parameter	Description	Default Value	Range
<Address>	Server Address	10.10.100.200	IP address: 0.0.0.0~255.255.255.255
			Domain name: 1-64 BYTES
<Port>	Server Port	80	0-65535
Format			
Query	AT+HTPSV<CR>		
Return	<CR><LF>+ok=<Address>,<Port><CR><LF>		
Set	AT+HTPSV=<Address>,<Port><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.59. AT+HTPTP

Parameter	Description	Default Value	Range
<Method>	HTTPD request method	GET	GET/PUT/POST
Format			
Query	AT+HTPTP<CR>		
Return	<CR><LF>+ok=<Method><CR><LF>		
Set	AT+HTPTP=<Method><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.60. AT+HTPURL

Parameter	Description	Default Value	Range
<URL>	HTTPD URL	/abcd	Length:1~64 bytes
Format			
Query	AT+HTPURL<CR>		
Return	<CR><LF>+ok=<URL><CR><LF>		
Set	AT+HTPURL=<URL><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.61. AT+HTPHEAD

Parameter	Description	Default Value	Range
<Header>	HTTPD header data	Content-type:text/html; charset=utf-8(User should use <<CRLF>> to replace carriage return and line feed)	Length: 0~200 bytes

Format	
Query	AT+HTPHEAD<CR>
Return	<CR><LF>+ok=<Header><CR><LF>
Set	AT+HTPHEAD=<Header><CR>
Return	<CR><LF>+ok<CR><LF>

4.62. AT+REGEN

Parameter	Description	Default Value	Range
<Status>	Status of identity packet	off	id: Use 2 bytes ID code and 2 bytes ID inverse code as identity packet
			mac: Use 6 bytes MAC address as identity packet
			off: Disable the identity packet function
Format			
Query	AT+REGEN<CR>		
Return	<CR><LF>+ok=<Status><CR><LF>		
Set	AT+REGEN=<Status><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.63. AT+REGTCP

Parameter	Description	Default Value	Range
<Method>	Identity packet sending method	first	first: Only sending Identity packet before first packet after firstly connecting to server
			every: Sending Identity packet in every packet.
Format			
Query	AT+REGTCP<CR>		
Return	<CR><LF>+ok=<Method><CR><LF>		
Set	AT+REGTCP=<Method><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.64. AT+REGID

Parameter	Description	Default Value	Range
<ID>	Identity packet ID	1111	0-65535

Format	
Query	AT+REGID<CR>
Return	<CR><LF>+ok=<ID><CR><LF>
Set	AT+REGID=<ID><CR>
Return	<CR><LF>+ok<CR><LF>

4.65. AT+IPBUP

Parameter	Description	Default Value	Range
<Status A>	Status of domain name resolution IP backup function of socket A	off	on/off
<Status B>	Status of domain name resolution IP backup function of socket B	off	on/off
Format			
Query	AT+IPBUP<CR>		
Return	<CR><LF>+ok=<Status A>,<Status B><CR><LF>		
Set	AT+IPBUP=<Status A>,<Status B><CR>		
Return	<CR><LF>+ok<CR><LF>		

4.66. AT+STAPRO

Parameter	Description	Default Value	Range
<Status>	Status of smart STA function	off	on/off
Format			
Query	AT+STAPRO<CR>		
Return	<CR><LF>+ok=<Status><CR><LF>		
Set	AT+STAPRO=<Status><CR>		
Return	<CR><LF>+ok<CR><LF>		

5. Contact

Company: Jinan USR IOT Technology Limited

Address: Floor 11, Building No.1, No.1166, Xinluo Street, Gaoxin District, Jinan city, Shandong province, 250101 China

Tel: 86-531-88826739

Web: www.usriot.com

Support: h.usriot.com

Email: sales@usr.cn

6. Disclaimer

This document provide the information of USR-WIFI232-D2 products, it hasn't been granted any intellectual property license by forbidding speak or other ways either explicitly or implicitly. Except the duty declared in sales terms and conditions, we don't take any other responsibilities. We don't warrant the products sales and use explicitly or implicitly, including particular purpose merchant-ability and marketability, the tort liability of any other patent right, copyright, intellectual property right. We may modify specification and description at any time without prior notice.

7. Update History

2017-10-10 V1.0.0 created based on firmware version 5.01D.24.