

version V1.0.4





Content

1. Introduction 4 1.1. Overview 4 1.2. Features 4 2. Get Started 5 2.1. Specification 5 2.2. Lispecification 7 2.2.1. Specification 7 2.2.1. Internations 7 2.2.2. Interfaces 8 2.3. Connecting Hardware 9 2.3.1. Hardware Preparation 9 2.3.2. Installing SIM card and antenna 10 2.3.3. Serial Connecting 10 2.3.4. Power Supply 10 3. Utility Configuration 11 3.1. Download the Utility 11 3.2. Configuration via PC 11 3.2. Configuration via PC 11 4.1. Basic Parameters 12 4.1. Basic Parameters 12 4.2. Framing mechanism 13 4.2.1. Time Trigger. 13 4.2.2. Length trigger 13 4.2.3. Network Data Output Port. 14 5. Selecting an Operating Mode. 14 5.1.1. TCP Client Mode. 15 5.1.2. TCP Server Mode. 15 5	Content	1
1.1. Overview. 4 1.2. Features. 4 2. Get Started. 5 2.1. Specification. 5 2.2. Hardware. 7 2.2.1. Dimensions. 7 2.2.1. Dimensions. 7 2.2.1. Dimensions. 7 2.2.2. Indicators. 8 2.3. Connecting Hardware. 9 2.3.1. Hardware Preparation. 9 2.3.2. Installing SIM card and antenna 10 2.3.3. Serial Connecting. 10 2.3.4. Power Supply. 10 3. Utility Configuration 11 3.1. Download the Utility. 11 3.2. Configuration via PC. 11 4. Serial Port. 12 4.1. Basic Parameters. 12 4.1. Basic Parameters. 12 4.1. Basic Parameters. 12 4.2. Framing mechanism. 13 4.2.1. Time Trigger. 13 4.2.2. Length trigger. 13 4.2.3. Network Data Output Port. 14 5.1.1. TCP Client Mode. 14 5.1.2. TCP Server Mode. 15 5.1.3. USP	1. Introduction	
1.2 Features. 4 2. Get Started. 5 2.1. Specification. 5 2.2. Hardware. 7 2.2.1. Dimensions. 7 2.2.2. Interfaces. 8 2.2.3. Connecting Hardware. 9 2.3.1. Hardware Preparation. 9 2.3.2. Installing SIM card and antenna. 10 2.3.3. Serial Connecting 10 2.3.4. Power Supply. 10 3. Utilty Configuration 11 3.1. Download the Utility. 11 3.1. Download the Utility. 11 3.1. Ownload the Utility. 11 3.1. Ownload the Utility. 11 3.1. Hardware Preparation. 12 4.1. Basic Parameters. 12 4.1. Basic Parameters. 12 4.1. Basic Parameters. 12 4.2. Length trigger. 13 4.2.2. Length trigger. 13 4.2.3. Network Data Output Port. 14 5.1.1. TCP Client Mode. 14 5.1.2. TCP Server Mode. 15 5.1.3. UDP Client Mode. 20 5.3. SMS Mode. 23	1.1. Overview	
2. Get Started. 5 2.1. Specification 5 2.2. Hardware. 7 2.2.1. Dimensions. 7 2.2.2. Interfaces. 8 2.3.1. Dimensions. 7 2.2.2. Interfaces. 8 2.3.1. Midicators. 8 2.3.2. Installing SIM card and antenna. 10 2.3.3. Serial Connecting. 10 2.3.4. Power Supply. 10 3.1. Utility Configuration. 11 3.1. Download the Utility. 11 3.2. Configuration in PC. 11 3.2. Configuration via PC. 11 4.1. Basic Parameters. 12 4.2. Framing mechanism. 13 4.2.1. Time Trigger. 13 4.2.2. Length trigger. 13 4.2.3. Network Data Output Port. 14 5.1.2. TCP Server Mode. 15 5.1.2. TCP Server Mode. 15 5.1.3. UDP Client Mode. 20 5.1.4. Grametar Package. 26 <	1.2. Features	
2.1. Specification 5 2.2. Hardware 7 2.2.1. Dimensions 7 2.2.2.1. Interfaces 8 2.3.2. Interfaces 8 2.3.3. Schallang Hardware 9 2.3.1. Hardware Preparation 9 2.3.1. Hardware Preparation 9 2.3.3. Serial Connecting 10 2.3.3. Serial Connecting 10 2.3.4. Power Supply 10 3. Utilty Configuration 11 3.1. Download the Utility 11 3.2. Configuration via PC 11 4.1. Basic Parameters 12 4.1. Basic Parameters 12 4.2. Framing mechanism 13 4.2.1. Time Trigger 13 4.2.2. Length trigger 13 4.2.3. Network Data Output Port 14 5.1. OCP Server Mode 14 5.1. TCP Client Mode 15 5.1.1. TCP Client Mode 20 5.3. SMS Mode 20 5.3. SMS Mode 20 5.3. SMS Mode 23 6. General Function 26 6. A settor to Factory Default Set	2. Get Started	5
2.2. Hardware. .7 2.2.1. Dimensions. .7 2.2.2. Interfaces. .8 2.3.2. Indicators. .8 2.3.2. Indicators. .8 2.3.3. Connecting Hardware. .9 2.3.1. Hardware Preparation. .9 2.3.2. Installing SIM card and antenna. .10 2.3.3. Serial Connecting. .10 2.3.4. Power Supply. .10 3. Utility Configuration. .11 3.1. Download the Utility. .11 3.2. Configuration via PC. .11 4.2. Serial Port. .12 4.1. Basic Parameters. .12 4.2. Framing mechanism. .13 4.2.1. Time Trigger. .13 4.2.2. Length trigger. .13 4.2.3. Network Data Output Port. .14 5.1. Net Transparent Mode. .14 5.1. Net Transparent Mode. .14 5.1. TCP Server Mode. .18 5.1.3. UOP Client Mode. .20 5.3. SMS Mode. .20 5.3. SMS Mode. .20 5.3. SMS Mode. .20 5.3. SMS Mode. .20	2.1. Specification	5
2.2.1. Dimensions 7 2.2.2. Interfaces 8 2.2.3. Indicators 8 2.2.3. Indicators 8 2.3.3. Serial Connecting Hardware 9 2.3.4. Installing SIM card and antenna 10 2.3.3. Serial Connecting 10 2.3.4. Power Supply 10 3.4. Power Supply 10 3.1. Download the Utility 11 3.1. Download the Utility 11 3.2. Configuration 11 3.1. Download the Utility 11 3.2. Configuration via PC 11 4. Serial Port 12 4.1. Basic Parameters 12 4.2. Framing mechanism 13 4.2.1. Time Trigger 13 4.2.2. Length trigger 13 4.2.3. Network Data Output Port 14 5.1.1. TCP Client Mode 14 5.1.1. TCP Client Mode 15 5.1.2. TCP Server Mode 18 5.1.3. UDP Client Mode 20 5.3. SMS Mode 23 6. General Function 26 6.1. Identity Package 26 6.2	2.2. Hardware	7
2.2.2. Interfaces 8 2.2.3. Indicators 8 2.3. Connecting Hardware 9 2.3.1. Hardware Preparation 9 2.3.2. Installing SIM card and antenna 10 2.3.3. Serial Connecting 10 2.3.4. Power Supply 10 3. Utility Configuration 11 3.1. Download the Utility 11 3.2. Configuration via PC 11 4. Serial Port 12 4.1. Basic Parameters 12 4.2. Framing mechanism 13 4.2.1. Time Trigger 13 4.2.2. Length trigger 13 4.2.3. Network Data Output Port 14 5. Selecting an Operating Mode 14 5.1.1. TCP Client Mode 19 5.1.2. TCP Server Mode 18 5.3. SMS Mode 23 6. General Function 26 6.1. Identity Package 26 6.2. Heartbeat Package 28 6.3. Base Station Position 31 6.4. Modbus 32 6.5. FTP Upgrade 34 6.6. Restore to Factory Default Settings 35 <td>2.2.1. Dimensions</td> <td>7</td>	2.2.1. Dimensions	7
2.2.3. Indicators	2.2.2. Interfaces	
2.3. Connecting Hardware 9 2.3.1. Hardware Preparation. 9 2.3.2. Installing SIM card and antenna. 10 2.3.3. Serial Connecting. 10 2.3.4. Power Supply. 10 3. Utility Configuration. 11 3.1. Download the Utility. 11 3.2. Configuration via PC 11 4. Serial Port. 12 4. Serial Port. 12 4.1. Basic Parameters. 12 4.2. Framing mechanism. 13 4.2.1. Time Trigger. 13 4.2.2. Length trigger. 13 4.2.3. Network Data Output Port. 14 5. Selecting an Operating Mode. 14 5.1.1. TCP Client Mode. 15 5.1.2. TCP Server Mode. 15 5.1.3. UDP Client Mode. 19 5.2. HTTPD Client Mode. 20 5.3. SMS Mode. 23 6. General Function. 26 6.1. Identity Package. 26 6.2. Heartbeat Package. 26 6.3. Base Station Position. 31 6.4. Modbus. 32 6.5. FTP Upgrade. 34 </td <td>2.2.3. Indicators</td> <td>8</td>	2.2.3. Indicators	8
2.3.1. Hardware Preparation. .9 2.3.2. Installing SIM card and antenna. 10 2.3.3. Serial Connecting. 10 2.3.4. Power Supply. 10 3.1. Utility Configuration 11 3.1. Download the Utility. 11 3.2. Configuration via PC 11 3.2. Configuration via PC 11 4. Serial Port. 12 4.1. Basic Parameters. 12 4.2. Framing mechanism. 13 4.2.1. Time Trigger 13 4.2.2. Length trigger. 13 4.2.3. Network Data Output Port. 14 5.1. Net Transparent Mode. 14 5.1.1. TCP Client Mode. 15 5.1.2. TCP Server Mode. 18 5.1.3. UDP Client Mode. 20 5.3. SMS Mode. 23 6. General Function. 26 6.1. Identity Package. 26 6.3. Base Station Position. 31 6.4. Modbus. 32 6.5. FTP Upgrade. 34 6.6. Restore to Factory Default Settings. 35 6.7. Upgrade Firmware. 35 6.7. Upgrade Firmwar	2.3. Connecting Hardware	9
2.3.2. Installing SIM card and antenna. 10 2.3.3. Serial Connecting. 10 2.3.4. Power Supply. 10 3. Utility Configuration 11 3.1. Download the Utility. 11 3.2. Configuration via PC. 11 4.3. Expandent the Utility. 11 3.2. Configuration via PC. 11 4.1. Basic Parameters. 12 4.1. Basic Parameters. 12 4.2. Framing mechanism. 13 4.2.1. Time Trigger. 13 4.2.2. Length trigger. 13 4.2.3. Network Data Output Port. 14 5. Selecting an Operating Mode. 14 5.1.1. TCP Client Mode. 15 5.1.2. TCP Server Mode. 18 5.1.3. UDP Client Mode. 20 5.3. SMS Mode. 23 6. General Function 26 6.1. Identity Package. 26 6.2. Heartbeat Package. 26 6.3. Base Station Position 31 6.4. Modbus. 32 6.5. FTP Upgrade. 35 6.7. Upgrade by Serial Port. 35 6.6. Restore to Factor	2.3.1. Hardware Preparation	9
2.3.3. Serial Connecting 10 2.3.4. Power Supply 10 3. Utility Configuration 11 3.1. Download the Utility 11 3.2. Configuration via PC 11 4.1. Basic Parameters 12 4.1. Basic Parameters 12 4.2. Framing mechanism 13 4.2.1. Time Trigger 13 4.2.2. Length trigger 13 4.2.3. Network Data Output Port 14 5. Selecting an Operating Mode 14 5.1.1. TCP Client Mode 15 5.1.2. TCP Server Mode 18 5.1.3. UDP Client Mode 20 5.3. SMS Mode 23 6. General Function 26 6.1. Identity Package 26 6.2. Heartbeat Package 26 6.3. Base Station Position 31 6.4. Modbus 32 6.5. FTP Upgrade 34 6.6. Restore to Factory Default Settings 35 6.7. Upgrade Eirmware 35 6.7.1. Upgrade by Serial Port 35 6.7.2. Remote Upgrade 39	2.3.2. Installing SIM card and antenna	
2.3.4. Power Supply	2.3.3. Serial Connecting	
3. Utility Configuration 11 3.1. Download the Utility 11 3.2. Configuration via PC 11 4. Serial Port 12 4.1. Basic Parameters 12 4.2. Framing mechanism 13 4.2.1. Time Trigger 13 4.2.2. Length trigger 13 4.2.3. Network Data Output Port 14 5. Selecting an Operating Mode 14 5.1. Net Transparent Mode 14 5.1.1. TCP Client Mode 15 5.1.2. TCP Server Mode 18 5.1.3. UDP Client Mode 20 5.3. SMS Mode 23 6. General Function 26 6.1. Identity Package 26 6.2. Heartbeat Package 28 6.3. Base Station Position 31 6.4. Modbus 32 6.5. FTP Upgrade 34 6.6. Restore to Factory Default Settings 35 6.7.1. Upgrade by Serial Port 35 6.7.2. Remote Upgrade 39	2.3.4. Power Supply	
3.1. Download the Utility. 11 3.2. Configuration via PC. 11 4. Serial Port. 12 4.1. Basic Parameters. 12 4.2. Framing mechanism. 13 4.2.1. Time Trigger. 13 4.2.2. Length trigger. 13 4.2.3. Network Data Output Port. 14 5. Selecting an Operating Mode. 14 5. Net Transparent Mode. 14 5.1.1. TCP Client Mode. 15 5.1.2. TCP Server Mode. 18 5.1.3. UDP Client Mode. 19 5.2. HTTPD Client Mode. 20 5.3. SMS Mode. 23 6. General Function. 26 6.1. Identity Package. 26 6.2. Heartbeat Package. 28 6.3. Base Station Position. 31 6.4. Modbus. 32 6.5. FTP Upgrade. 34 6.6. Restore to Factory Default Settings. 35 6.7. Upgrade Firmware. 35 6.7.1. Upgrade by Serial Port. 35 6.7.2. Remote Upgrade. 39	3. Utility Configuration	
3.2. Configuration via PC. 11 4. Serial Port. 12 4.1. Basic Parameters. 12 4.2. Framing mechanism. 13 4.2.1. Time Trigger. 13 4.2.2. Length trigger. 13 4.2.3. Network Data Output Port. 14 5. Selecting an Operating Mode. 14 5.1. Net Transparent Mode. 14 5.1.1. TCP Client Mode. 15 5.1.2. TCP Server Mode. 18 5.1.3. UDP Client Mode. 20 5.3. SMS Mode. 23 6. General Function. 26 6.1. Identity Package. 26 6.2. Heartbeat Package. 28 6.3. Base Station Position. 31 6.4. Modbus. 32 6.5. FTP Upgrade. 34 6.6. Restore to Factory Default Settings. 35 6.7.1. Upgrade Firmware. 35 6.7.2. Remote Upgrade. 39	3.1. Download the Utility	
4. Serial Port. 12 4.1. Basic Parameters. 12 4.2. Framing mechanism. 13 4.2.1. Time Trigger. 13 4.2.2. Length trigger. 13 4.2.3. Network Data Output Port. 14 5. Selecting an Operating Mode. 14 5.1. Net Transparent Mode. 14 5.1. Net Transparent Mode. 14 5.1.1. TCP Client Mode. 15 5.1.2. TCP Server Mode. 18 5.1.3. UDP Client Mode. 19 5.2. HTTPD Client Mode. 20 5.3. SMS Mode. 23 6. General Function. 26 6.1. Identity Package. 26 6.2. Heartbeat Package. 28 6.3. Base Station Position. 31 6.4. Modbus. 32 6.5. FTP Upgrade. 34 6.6. Restore to Factory Default Settings. 35 6.7. Upgrade Firmware. 35 6.7.1. Upgrade by Serial Port. 35 6.7.2. Remote Upgrade. 39	3.2. Configuration via PC	
4.1. Basic Parameters 12 4.2. Framing mechanism 13 4.2.1. Time Trigger 13 4.2.1. Time Trigger 13 4.2.2. Length trigger 13 4.2.3. Network Data Output Port 14 5. Selecting an Operating Mode 14 5. Selecting an Operating Mode 14 5.1. Net Transparent Mode 14 5.1. TCP Client Mode 15 5.1.2. TCP Server Mode 18 5.1.3. UDP Client Mode 19 5.2. HTTPD Client Mode 20 5.3 SMS Mode 23 6. General Function 26 6.1. Identity Package 28 6.3. Base Station Position 31 6.4. Modbus 32 6.5. FTP Upgrade 34 6.6. Restore to Factory Default Settings 35 6.7. Upgrade Firmware 35 6.7.1. Upgrade by Serial Port 35 6.7.2. Remote Upgrade 39	4. Serial Port	
4.2. Framing mechanism. 13 4.2.1. Time Trigger. 13 4.2.2. Length trigger. 13 4.2.3. Network Data Output Port. 14 5. Selecting an Operating Mode. 14 5. Selecting an Operating Mode. 14 5.1. Net Transparent Mode. 14 5.1. TCP Client Mode. 15 5.1.2. TCP Server Mode. 18 5.1.3. UDP Client Mode. 19 5.2. HTTPD Client Mode. 20 5.3. SMS Mode. 23 6. General Function. 26 6.1. Identity Package. 26 6.2. Heartbeat Package. 28 6.3. Base Station Position. 31 6.4. Modbus. 32 6.5. FTP Upgrade. 34 6.6. Restore to Factory Default Settings. 35 6.7. Upgrade Firmware. 35 6.7.1. Upgrade by Serial Port. 35 6.7.2. Remote Upgrade. 39	4.1. Basic Parameters	
4.2.1. Time Trigger	4.2. Framing mechanism	
4.2.2. Length trigger	4.2.1. Time Trigger	13
4.2.3. Network Data Output Port.145. Selecting an Operating Mode.145.1. Net Transparent Mode.145.1. Net Transparent Mode.145.1.1. TCP Client Mode.155.1.2. TCP Server Mode185.1.3. UDP Client Mode.195.2. HTTPD Client Mode.205.3. SMS Mode.236. General Function.266.1. Identity Package.266.2. Heartbeat Package.286.3. Base Station Position.316.4. Modbus.326.5. FTP Upgrade.346.6. Restore to Factory Default Settings.356.7. Upgrade Firmware.356.7.1. Upgrade by Serial Port.356.7.2. Remote Upgrade.39	4.2.2. Length trigger	
5. Selecting an Operating Mode145.1. Net Transparent Mode145.1.1. TCP Client Mode155.1.2. TCP Server Mode185.1.3. UDP Client Mode195.2. HTTPD Client Mode205.3. SMS Mode236. General Function266.1. Identity Package266.2. Heartbeat Package286.3. Base Station Position316.4. Modbus326.5. FTP Upgrade346.6. Restore to Factory Default Settings356.7.1. Upgrade Firmware356.7.2. Remote Upgrade39	4.2.3. Network Data Output Port	14
5.1. Net Transparent Mode145.1.1. TCP Client Mode155.1.2. TCP Server Mode185.1.3. UDP Client Mode195.2. HTTPD Client Mode205.3. SMS Mode236. General Function266.1. Identity Package266.2. Heartbeat Package286.3. Base Station Position316.4. Modbus326.5. FTP Upgrade346.6. Restore to Factory Default Settings356.7. Upgrade Firmware356.7.1. Upgrade by Serial Port356.7.2. Remote Upgrade39	5. Selecting an Operating Mode	14
5.1.1. TCP Client Mode155.1.2. TCP Server Mode185.1.3. UDP Client Mode195.2. HTTPD Client Mode205.3. SMS Mode236. General Function266.1. Identity Package266.2. Heartbeat Package286.3. Base Station Position316.4. Modbus326.5. FTP Upgrade346.6. Restore to Factory Default Settings356.7. Upgrade Firmware356.7.1. Upgrade by Serial Port356.7.2. Remote Upgrade39	5.1. Net Transparent Mode	
5.1.2. TCP Server Mode.185.1.3. UDP Client Mode.195.2. HTTPD Client Mode.205.3. SMS Mode.236. General Function.266.1. Identity Package.266.2. Heartbeat Package.286.3. Base Station Position.316.4. Modbus.326.5. FTP Upgrade.346.6. Restore to Factory Default Settings.356.7. Upgrade Firmware.356.7.1. Upgrade by Serial Port.356.7.2. Remote Upgrade.39	5.1.1. TCP Client Mode	15
5.1.3. UDP Client Mode195.2. HTTPD Client Mode205.3. SMS Mode236. General Function266.1. Identity Package266.2. Heartbeat Package286.3. Base Station Position316.4. Modbus326.5. FTP Upgrade346.6. Restore to Factory Default Settings356.7. Upgrade Firmware356.7.1. Upgrade by Serial Port356.7.2. Remote Upgrade39	5.1.2. TCP Server Mode	
5.2. HTTPD Client Mode.205.3. SMS Mode.236. General Function.266.1. Identity Package.266.2. Heartbeat Package.286.3. Base Station Position.316.4. Modbus.326.5. FTP Upgrade.346.6. Restore to Factory Default Settings.356.7. Upgrade Firmware.356.7.1. Upgrade by Serial Port.356.7.2. Remote Upgrade.39	5.1.3. UDP Client Mode	19
5.3. SMS Mode.236. General Function.266.1. Identity Package.266.2. Heartbeat Package.286.3. Base Station Position.316.4. Modbus.326.5. FTP Upgrade.346.6. Restore to Factory Default Settings.356.7. Upgrade Firmware.356.7.1. Upgrade by Serial Port.356.7.2. Remote Upgrade.39	5.2. HTTPD Client Mode	20
6. General Function266.1. Identity Package.266.2. Heartbeat Package.286.3. Base Station Position.316.4. Modbus.326.5. FTP Upgrade.346.6. Restore to Factory Default Settings.356.7. Upgrade Firmware.356.7.1. Upgrade by Serial Port.356.7.2. Remote Upgrade.39	5.3. SMS Mode	23
6.1. Identity Package.266.2. Heartbeat Package.286.3. Base Station Position.316.4. Modbus.326.5. FTP Upgrade.346.6. Restore to Factory Default Settings.356.7. Upgrade Firmware.356.7.1. Upgrade by Serial Port.356.7.2. Remote Upgrade.39	6. General Function	
6.2. Heartbeat Package.286.3. Base Station Position.316.4. Modbus.326.5. FTP Upgrade.346.6. Restore to Factory Default Settings.356.7. Upgrade Firmware.356.7.1. Upgrade by Serial Port.356.7.2. Remote Upgrade.39	6.1. Identity Package	
6.3. Base Station Position.316.4. Modbus.326.5. FTP Upgrade.346.6. Restore to Factory Default Settings.356.7. Upgrade Firmware.356.7.1. Upgrade by Serial Port.356.7.2. Remote Upgrade.39	6.2. Heartbeat Package	
6.4. Modbus.326.5. FTP Upgrade.346.6. Restore to Factory Default Settings.356.7. Upgrade Firmware.356.7.1. Upgrade by Serial Port.356.7.2. Remote Upgrade.39	6.3. Base Station Position	31
6.5. FTP Upgrade	6.4. Modbus	
6.6. Restore to Factory Default Settings	6.5. FTP Upgrade	
6.7. Upgrade Firmware	6.6. Restore to Factory Default Settings	
6.7.1. Upgrade by Serial Port	6.7. Upgrade Firmware	
6.7.2. Remote Upgrade	6.7.1. Upgrade by Serial Port	
	6.7.2. Remote Upgrade	



Be Hollest, Do Best !	USR-G786-G User Manual	Technical Support: h.usriot.com
7. AT Command Set		
7.1. AT Command Example	2S	
7.1.1. Serial AT Command		
7.1.2. Network AT Comman	d	
7.1.3. SMS AT Command		
7.1.4. Command Format		
7.2. AT Command Set		
7.2.1. AT		
7.2.2. AT+H		47
7.2.3. AT+Z		
7.2.4. AT+E		
7.2.5. AT+ENTM		
7.2.6. AT+WKMOD		
7.2.7. AT+CMDPW		
7.2.8. AT+STMSG		
7.2.9. AT+RSTIM		
7.2.10. AT+CSQ		
7.2.11. AT+SYSINFO		
7.2.12. AT+UCPIN		51
7.2.13. AT+RELD		51
7.2.14. AT+CLEAR		51
7.2.15. AT+CFGTF		
7.2.16. AT+VER		
7.2.17. AT+SN		
7.2.18. AT+ICCID		
7.2.19. AT+IMEI		
7.2.20. AT+CIP		53
7.2.21. AT+LBS		
7.2.22. AT+CCLK		53
7.2.23. AT+PING		53
7.2.24. AT+UART		
8: 8 data bits		54
1: 1 stop bit		54
2: 2 stop bits		54
7.2.25. AT+CMDPT		54
7.2.26. AT+UARTFT		
7.2.27. AT+UARTFL		55
7.2.28. AT+APN		55
7.2.29. AT+SOCKA		
7.2.30. AT+SOCKB		
7.2.31. AT+SOCKAEN		
7.2.32. AT+SOCKBEN		
7.2.33. AT+SOCKALK		
7.2.34. AT+SOCKBLK		



Be Honest, Do Best !	USR-G786-G User Manual	Technical Support: h.usriot.com
7.2.35. AT+SOCKATO		
7.2.36. AT+SOCKBTO		
7.2.37. AT+SOCKRSTIM		
7.2.38. AT+MODBUSEN		
7.2.39. AT+REGEN		
7.2.40. AT+REGTP		
7.2.41. AT+REGDT		60
7.2.42. AT+REGSND		
7.2.43. AT+HEARTEN		60
7.2.44. AT+HEARTDT		61
7.2.45. AT+HEARTSND		
7.2.46. AT+HEARTTM		61
7.2.47. AT+HTPTP		
7.2.48. AT+HTPURL		
7.2.49. AT+HTPSV		
7.2.50. AT+HTPHD		
7.2.51. AT+HTPTO		
7.2.52. AT+HTPFLT		
7.2.53. AT+DSTNUM		
7.2.54. AT+SMSFLT		64
7.2.55. AT+CISMSSEND		64
8. Contact Us		65
9. Disclaimer		
10. Update History		65



1. Introduction

1.1. Overview

4G cellular modem USR-G786-G is launched in 2020 featuring with rugged design, high speed, low latency, compact size, high reliability and global bands. G786 provides wireless data communications between field serial devices and the central control system to enable remote control of industrial field sites. It supports TCP/UDP/HTTP protocol, SMS work mode, user-defined identity and heartbeat packets, 2 sockets connection, underneath device FTP upgrade and remote self-update. G786 is ideal for M2M and IoT applications including distribution automation, smart metering, water & wastewater, heating, street light monitoring and etc.

Please open our official website for more information.

https://www.pusr.com/products/4g-cellular-modems-with-global-bands-usr-g786-g.html

1.2. Features





- > Supports global 4G LTE frequency bands.
- Supports 2 sockets, TCP Server, TCP Client, UDP and HTTP client.
- Built-in hardware watchdog.
- Each socket supports buffering 5 packets of serial data, each packet up to 1000bytes.
- Supports user-defined identity and heartbeat packets.
- Supports configuration by serial / SMS / network AT commands.
- Supports base station location.
- > Supports Modbus RTU/TCP protocol conversion.
- > Supports base station positioning.
- Supports multiple modes including transparent transmission mode, HTTPD Client mode and SMS mode.
- Supports remote firmware upgrade, keep the firmware up to date.
- > Supports sending English SMS.

2. Get Started

2.1. Specification

Item	Description	Parameter	
	Standard	FDD-LTE, TDD-L	TE, UMTS, GSM
		FDD-LTE	B1/B2/B3/B4/B5/B7/B8/B12/B13/B18/B19/B2 0/B25/B26/B28
	Frequency Band	TDD-LTE	B38/B39/B40/B41
		WCDMA	B1/B2/B4/B5/B6/B8/B19
		GSM	B2/B3/B5/B8
		TDD-LTE	+23dBm±2dB(Power class 3)
		FDD-LTE	+23dBm±2dB(Power class 3)
		WCDMA	+24dBm+1/-3dB(Power class 3)
		PCS1900	+26dBm±2dB(Power class E2)
Wireless		8-PSK	
module		DCS1800	+26dBm±2dB(Power class E2)
modulo	Transmitting Power	8-PSK	
		EGSM900	+27dBm±27dB(Power class E2)
		8-PSK	
		GSM850 8-PSK	+2dBm±2dB(Power class E2)
		PCS1900	+30dBm±2dB(Power class 1)
		DCS1800	+30dBm±2dB(Power class 1)
		EGSM900	+33dBm±2dB(Power class 4)
		GSM850	+33dBm±2dB(Power class 4)
		FDD-LTE	Download 150Mbps, upload 50Mbps
	Data Speed	TDD-LTE	Download 130Mbps, upload 30Mbps
		WCDMA	Download 384Kbps, upload 384Kbps



Be Hor	USR-	-G786-G User Manual Technical Support: h.usriot.com		
		EDGE Download 296Kbps, upload 236.8Kbps		
		GPRS Download 107Kbps, upload 85.6Kbps		
	Serial Port Type	1 x RS-232/RS-485,software selection		
	Baud Rate	RS232: 2400bps - 460800bps		
	Dadu Nate	RS485: 2400bps - 230400bps		
	Port Connector	Pluggable industrial terminal block		
	Serial Signals	RS232:TX RX GND RS485:A B GND		
		ESD: IEC 61000-4-2 Level 4		
	Serial Port Protection	Surge: IEC 61000-4-5 Level 3		
		EFT: IEC 61000-4-5 Level 3		
	Power Interface	Pluggable industrial terminal block		
		ESD: IEC 61000-4-2 Level 4		
	Power Interface	Surge: IEC 61000-4-5 Level 3		
	Protection	EFT: IEC 61000-4-4 Level 3		
		Anti-reverse protection		
Hardware	Power Input	DC 9V~36V		
	Consumption	Working current: 77mA@12V Peak current:165mA@12V		
	RS485 Pull-down	2.2ΚΩ		
	resistance			
	SIM card slot	1,8V/3V, drawer-type slot		
	Antenna	1 x SMA Female interface		
	Working Temperature	-35℃ - 75℃		
	Storage Temperature	-40° ℃ - 90 °℃		
	Ambient Humidity	5 ~ 95% (non-condensing)		
	Indicators	Power,Work,Net,LinkA		
	Enclosure	Metal casing		
	Protection Rating	IP30		
	Installation	Wall-mounting		
	Dimension (mm)	112.2*94*28(L*W*H)		
	Work mode	Transparent mode, HTTPD mode, SMS mode		
	Configuration	Serial AT command,Net AT command,SMS AT		
		command,windows utility		
	Network Protocol	TCP/UDP/DNS/HTTP/FTP		
	Maximum NO. Of TCP	2		
	connection			
Software	Network Access	APN, VPDN		
	Modbus RTU/TCP	Support		
	protocol conversion			
	SMS functions	Support		
	Heartbeat packet	Support		
	Identity packet	User defined identity packet/ICCID /IMEI		
	mechanism			
	FIP upgrade	Support		



Remote firmware update Support

2.2. Hardware

2.2.1. Dimensions

UNIT: mm.





2.2.2. Interfaces



2.2.3. Indicators

There are four LED indicators on USR-G786-G, POWER,WORK,NET,LINKA. Status of the indicator is explained as follows:

Indicators	Function	Description
POWER	Power indicator	Always on after power on
WORK	System status.	Blinking after system run
NET	Network status.	Always on after registering the network
LINKA	Socket A connection status	Always on after socket A connection



2.3. Connecting Hardware

2.3.1. Hardware Preparation

Open the packing box, the following accessories will be found:

		23.5cm
Sucker 4G antenna	Power adapter	Power cord
	Sucker 4G antenna	Sucker 4G antenna Power adapter (optional)

Required additional testing tools:



RS232 serial to USB cable



PC



2.3.2. Installing SIM card and antenna



Press and hold the ejection button of the sim card holder to eject it and install the sim card. Install the antenna.Gently rotate the movable part of the metal SMA male connector to the end with your hand, until the external threads of the antenna SMA female connector cannot be seen.

2.3.3. Serial Connecting



Remove the terminal from the device during installation, loosen the locking screws on the terminal, connect the corresponding wires to the terminal, and tighten the screws.

RS232: When connecting to a RS232 serial device, connect TX of RS232 interface of G786-G to RX of the serial device, RX of G786-G to TX of the serial device, GND to GND.

RS485: When connecting to a RS485 serial device, connect A of RS485 interface of G786-G to A pin of the serial device, B of G786-G to B of serial device.

2.3.4. Power Supply



Connect a 9-36V DC power adapter to the power terminal. "POWER" LED will always be on and the



"WORK" LED will blink after power on.

3. Utility Configuration

3.1. Download the Utility

Please download the utility from our official website: https://www.pusr.com/support/downloads/usr_g786_g-setup-software-v1.0.1.html

3.2. Configuration via PC

🛠 USR-G786-G V1.0.1	- 🗆 X
File Language Help 1	
[PC Serial Parameters] : ComName COM79 🗸 BaudRate 115200 🗸 Parity/Data/Stop NONI 🗸	8 v 1 v Close PC Serial 🖗 Load Fw 😼 Start Fw
Choose Work Mode	Operation and Hints
● Transparent Mode 2 ○ HTTPD Client Mode ○ SMS Mode	Query all parameters
TCP/UDP	Enter Serial AT command mode Exit Serial AT command mode 5
PC NetWork M2M device Serial device	Help message Restart Query version
Transparent Mode parameters	Save as default Restore default Reset to factory settings
Socket A 3 IP&Port test.usr.cn 2317	A Query RSSI
Link Type TCPC ~ Over Time (s) 5	Time Hex RX:0
Enable Socket B	6
Modem Parameters Serial Serial Serial BaudRate 115200 4 Parity/Data/Stop NONE 8 1 ✓ More 8 1 ~ Generation Gage Time Interval(ms) Package Length(Bytes) 1000	~
Enable Echo MODBUS Change	▼
Command Password www.usr.cn# Welcome Message [USR-G786] APN CMNET,,,0	

USR-G786-G configuration utility is shown below:

Setp1: Set the serial port parameters of the utility, which must be the same with current parameters of serial port of G786, otherwise it cannot communicate with DTU. Default settings of serial port of G786: 115200, 8, None,1.

Step2: Select the work mode of DTU, transparent mode.

Step3: Select a transparent transmission protocol.

Step4: If you want to change the serial port parameters of the DTU in accord with the connected device, please change the parameters here. You can also enable modbusRTU/TCP conversion by click the "modbus change" option.



Step5: Save all configuration parameters, please click "save current parameters" button. G786 will save the configuration and restart automatically. If you changed serial parameters, please check the step1 before continuing.

Step6: Data display area, displaying the data sent and received with time stamp when click the "time" option.

Step7: Data sending area, enter the data and click Send.

4. Serial Port

4.1. Basic Parameters

USR-G786-G V1.0.1						– 🗆 ×
File Language Help						
[PC Serial Parameters] : Cor	mName COM21 v B	audRate 115200 v	Parity/Data/Stop NONI 🗸	8 ~ 1	Close PC Serial	Ş Start Fw
Choose Work Mode				Operation a	nd Hints	
Transparent Mode	⊖ HTTPD	Client Mode C) SMS Mode	s	🗟 Query all parameters	Save current parameters
TCP/UDP	TCP/UE	DP Se	rial		Enter Serial AT command mode	Exit Serial AT command mode
PC	NetWork	M2M device	Serial device	Time	RX:0	ResetCount
Transparent Mode parameter	rs			General o	peration process:	
Enable Socket A	IP&Port [Link Type [Over Time (s) [192.168.100.73 TCPS 5	50 ~	 1. Conne 2. Click " 3. Click " 4. Choose 	ct the module to PC serial port, p Open PC serial" Query all parameters" e work mode and configure relat	power the module
Enable Socket B				5. Click " Serial Op	Save current parameters" en Success	
Enable Heartbeat Package						
✓ Enable Identity Reg Package Reg	g Package Send Type [g Package Data Type [Send register data when ICCID Code	> >	*		
Modem Parameters						· · · · · · · · · · · · · · · · · · ·
Serial Serial Parity,	BaudRate 115200 /Data/Stop NONE	~ ~ 8 ~	1 ~	^		
kage Time	Interval(ms)100	Package Length(B)	/tes) 1000	✓ Send via S	Serial Port • TX:0	🔍 Send 👻

Serial parameters of USR-G786-G must be consistent with the parameters of the connected serial device.

Item	Parameter
Baud rate	RS232: 2400,4800,9600,14400,19200,28800,
	33600,38400,57600,115200,230400,460800
	RS485: 2400,4800,9600,14400,19200,28800,
	33600,38400,57600,115200,230400
Data bits	8
Stop bits	1,2



Bel	Honest, Do Best ! USR-G	786-G User Manual	Technical Support: h.usriot.com
		NONE	
	Parity bit	EVEN	
		ODD	

4.2. Framing mechanism

4.2.1. Time Trigger

When G786-G receives data from the UART, it continuously checks the interval of two adjacent bytes. If the interval time is greater or equal to a certain "time threshold", then a frame is considered finished, otherwise the data is received until greater or equal to the packet length byte set. This frame is sent to the network as a TCP or UDP packet. The "time threshold" here is the time between packages. The range of settable is 100ms~60000ms.Factory default: 100ms.

This parameter can be set by AT command, AT+UARTFT=<time>.



4.2.2. Length trigger

When G786-G receives data from the UART, it constantly checks the number of bytes received. If the number of bytes received is equal to a certain "length threshold", a frame is considered to have ended, otherwise the packaging time is waiting for the end. This frame is sent to the network as a TCP or UDP packet. The "length threshold" here is the package length. The settable range is 100~1000.Factory default 1000.

(Note: when using "command password +AT command" function, the package length must be larger than the "command password +AT command", otherwise AT command is invalid) This parameter can be set by AT command, AT+UARTFL=<length>.





4.2.3. Network Data Output Port

We need to set the output serial port of the USR-G786-G network data. Setting commands and parameters as follows:

Table1 Network data output serial port setting instructions

Command	Descriptions	
AT+CMDPT=RS232	Data sent from network is output on 232 serial port.	
AT+CMDPT=RS485	Data sent from network is output on 485 serial port.	
AT+CMDPT=RSALL	Data sent from network is output on 232 and 485 port. (Default)	

In order to ensure the data output efficiency, please select one serial port as the network data output port according to needs.

5. Selecting an Operating Mode

USR-G786-G has three working modes: net transparent mode, HTTPD Client mode and SMS mode.

5.1. Net Transparent Mode





In this mode, user's serial device can directly send data to the specified network server through G786-G. Module can also receive data from the server and directly forward to the serial device.

In this mode, users do not need to pay attention to the data conversion process between serial port and network data packets. They only need to set simple parameters to realize the transparent transmission of data between serial devices and network servers.

G786-G supports 2 socket connections, Socket A and Socket B, which are independent of each other. Only Socket A supports as TCP Client, TCP Server and UDP Client.Socket B only supports TCP Client and UDP Client .

It supports up to 3 TCP Clients when works as a TCP Server. Because the conventional operator network can not be accessed through the external network, so for the Server function need to use a dedicated APN card .

5.1.1. TCP Client Mode

① Set parameters by software:



Technical Support: h.usriot.com

USR-G786-G V1.0.1				- 🗆 X
File Language Help 1			_	
[PC Serial Parameters] : ComName COM21 V BaudRate 115200 V Parity/Data/Stop NOM)NI ~ 8	✓ 1 ✓ Open PC Serial	l 😼 Load Fw 😼 S	Start Fw
Choose Work Mode	(Operation and Hints	-	8
4 Transparent Mode O HTTPD Client Mode O SMS Mode	3	🗟 Query all paramete	ers	🗟 Save current parameters
TCP/UDP Serial Serial	2	Enter Serial AT command	mode 9	Exit Serial AT command mode
PC NetWork M2M device Serial device		Help message	Restart	Query version
Transparent Mode parameters		Save as default	Restore defa	ult Reset to factory settings
Enable	^	Ouery RSST	L	· ·
Socket A IP&Port test.usr.cn 2317	=	Time RX:1761		ResetCount
Over Time (s) 5	2	>[Tx->][11:40:48][asc]		^
Enable		AT+Z		
Socket B				
	>	>[Rx<-][11:40:49][asc]		
	/	AT+Z		
Enable Heartbeat Package	, c	Ж		
Modem Parameters		Operation complete		
		>[Rx<-][11:40:49][asc]		
Serial Serial BaudRate 115200 V	ſ	[USR-G786]		
Parity/Data/Stop NONE V 8 V 1 V	L L			
✓ More kage Time Interval(ms)100 Package Length(Bytes) 1000				
Enable Echo MODBUS Change	-			•
Command Password www.usr.cn#				
Welcome Message [USR-G786]				
7 APN CMNET,,,0		Send via Serial Port 👻	TX:0	🕗 Send 👻
Auto Rectort Time/c) 1800	v			

- 1. Open the setup software. Set the Serial port parameters according to the serial device and click "Open PC Serial".
- 2. Click "Enter Serial AT command mode" and wait for the device to enter AT command mode.
- 3. Click "Query all parameters" and wait for obtaining all current parameters.
- 4. In "Choose Work Mode", select "Transparent Mode".
- 5. Set "IP&Port" to test.usr.cn and 2317, link type to TCPC(TCP Client).
- 6. Check "More". If using an APN card, need to set the APN information.
- 7. Set APN parameter: CMNET, "0. E.g: APN: CMNET, username: empty, password: empty, authentication method: NONE.
- 8. Click "Save current parameters".
- 9. Click the "Restart" button to restart the module.
- 10. After the device restarts, NET and LINKA lights will be on, then we can transmit data in both directions.





② Set by AT command:

1. Set the work mode to net transparent transmission:

AT+WKMOD=NET

2. Enable socket A:

AT+SOCKAEN=ON

3. Set socket A to TCP Client:

AT+SOCKA=TCPC,test.usr.cn,2317

- 4. Set APN. E.g: APN is CMNET, username is empty, password is empty, authentication method is NONE: **AT+APN=CMNET,,,0**
- 5. Reboot:

AT+Z

③ Test

Connect the serial port of USR-G786-G to the computer via a RS232 serial to USB cable, send data from the setup software, our test server will return the same data to serial port.

USR-G786-G V1.0.1							– 🗆 X
File Language Help							
[PC Serial Parameters] : ComName COM21	BaudRate 115200 V Parity/Data/S	itop NONI v 8	~ 1	Open PC Serial	l 😽 Load Fw 😽 St	tart Fw	
Choose Work Mode			Operation	and Hints			
Transparent Mode O HT	TPD Client Mode 🔿 SMS Mode		e	🗟 Query all paramete	ers	🖷 Save current p	arameters
	P/UDP Serial			Enter Serial AT command	mode	Exit Serial AT comm	and mode
PC NetWork	M2M device Serial	I device		Help message	Restart	Qu	Jery version
Transparent Mode parameters				Save as default	Restore defau	lt Reset to	factory settings
✓ Enable		^		Ouen/ RSSI			×.
SOCKEL A IPAPO		_	✓ Time	Hex RX:1767			ResetCount
Over Time ((s) 5		AT+Z				^
Enable							
Socket B			OK				
Enable Heartbeat Package		~	Operatio >[Rx<-] [USR-G7	n complete [11:40:49][asc] ?86]			
Modem Parameters			>[Tx->]	[11:42:42][asc] Ser	nd		
Serial Serial BaudRate 11520	10 ~	^	123456				
Parity/Data/Stop NONE	✓ 8 ✓ 1	~	>[Rx<-]	[11:42:42][asc] Rec	ceive		
kage Time Interval(ms)100	Package Length(Bytes) 1000		123456				
Enable Echo	MODBUS Change						*
Command Password	www.usr.cn#		123456				
Welcome Message	[USR-G786]						
APN Auto Restart Time(s)	CMNET,,,0	~	Send via	Serial Port 👻 🗌 Hex	TX:6		🕘 Send 🔹



5.1.2. TCP Server Mode

TCP Server function needs to be test through an APN dedicated network card.

① Set parameters by setup software:

★ USR-G786-G V1.0.1	1				– 🗆 X
[PC Serial Parameters] : ComName COM113 V BaudRate 115200 V Pa	rity/Data/Stop NONI - 8	V 1 V Close PC Serial	🖗 Load Fw ಳ Start Fw		
Choose Work Mode		Operation and Hints		8	
Transparent Mode 4	MS Mode	3 Query all parameters	Save	e current parameters	
TCP/UDP Seria	+	2 Enter Serial AT command mod	de 9 Exit Seria	I AT command mode	
PC NetWork 5 M2M device	Serial device	Help message	Restart	Query version	
Transparent Mode parameters		Save as default	Restore default	Reset to factory settings	
Socket A IP&Port 118.190.93.90	10	Query RSSI			
Unk Type TCPS		Time Hex RX:1618		_	ResetCount
					^
Socket B		Operation complete			
		>[Tx->][11:44:48][asc]			
		AT+Z			
☐ Enable Heartbeat Package	v	>[Rx<-][11:44:48][asc] AT+Z			
Modem Parameters		3			
Serial Serial BaudRate 115200		OK			
6 Parity/Data/Stop NONE 8	1 ~	Operation complete			
More Age Time Interval(ms)[100 Package Length(Byte	5) 1000	>[Rx<-][11:44:49][asc]			
Enable Echo MODBUS Change		[USR-G786]			
Command Password www.usr.cn#					
Veicome Message [USR-G786] 7 APN .sd,usrtest1@sdyr.vpdn.sd,wwv	/.usr.cn,1	abcdefg		•	~
Auto Restart Time(s) 1800		abcacig			
		Send via Serial Port • Hex TX:2:	21		🔍 Send 🕞

Device works as TCP Server, and need to be filled in the IP and port of itself in"IP & Port".

- ② Set by AT command:
- 1. Set the work mode to net transparent mode:

AT+WKMOD=NET

2. Enable socket A:

AT+SOCKAEN=ON

- 3. Set socket A as TCP Server, local port 2317, IP has no reference meaning in Server: AT+SOCKA=TCPS,test.usr.cn,2317
- 4. Set APN. E.g: APN:CMNET, username: empty, password: empty, authentication method: NONE: **AT+APN=CMNET,,,0**
- 5. Reboot:

AT+Z



5.1.3. UDP Client Mode

① Set parameters by software:



Set the link type to UDPC, fill in the IP and port of UDC server.

- ② Set by AT command:
- 1. Set the work mode to net transparent mode:

AT+WKMOD=NET

2. Enable socket A:

AT+SOCKAEN=ON

3. Set socket A as UDP Client, port 2317:

AT+SOCKA=UDPC,test.usr.cn,2317

4. Set APN. E.g: APN:CMNET, username: empty, password: empty, authentication method: NONE:

AT+APN=CMNET,,,0

5. Reboot:

AT+Z

③ Test

Connect the serial port of USR-G786-G to the computer via a serial to USB cable, realize the data transmission of serial port and network



Technical Support: h.usriot.com USR-G786-G User Manual * USR-G786-G V1.0. File Language Help (1) Pr [PC Serial Parameters] : ComName COM21 v BaudRate 115200 v Party/Data/Stop NONI v 8 v 1 v • Open PC Serial 🝕 Load Fw 🝕 Start Fw 123456 123456 123456 123456 (2) Local host addr (3) Local host port (4562) ration and Hints ose Work Mode ○ SMS Mode Trans narent Mode Query all parameters Save current paran TCP/UDI Enter Serial AT command mode Exit Serial AT command mode Close ☑ Time □ Hex PC M2M Serial de RX:274 ResetCount parent M >[Tx->][11:46:51][asc] 123456 Enable Socket A IP&Port 39. 4562 >[Tx->][11:46:51][asc] 123456 Link Type UDPO Over Time (s) >[Tx->][11:46:51][asc] 123456 Hore.... Clear Enable Socket >[Rx<-][11:47:10][asc] http://www.cmsoft.cn >[Rx<-][11:47:10][asc] Enable Heartbeat http://www.cmsoft.cn Indem Pa Sarial Ra y/Data/Stop NONE 8 ge Time Interval(ms)100 Package Length(Bytes) 100 Use escape chars AT CMD auto CR+L Append checkbits Enable Echo MODBUS Chang 123456 ← Clean | ↓ Cle Data Send Remote: Command Password v Send from file ... Period 100 ms Welcome Message [USR-G786] http://www onsoft.cr APN CMNET,,,0 Shortout History Send via Serial Port • Hex TX:30 🕘 Send 🕞 etart Te PX-24 TX:140

5.2. HTTPD Client Mode



In this mode, user's terminal device can send request data to the specified HTTP server through this module, then the module receives data from HTTP server, parses and sends data to the serial device.

User does not need to pay attention to the data conversion process between the serial data and the network data packet, and can achieve the data request from the serial device to the HTTP server through simple parameter



settings.

The module will filter out the received HTTP protocol header data by default, only output user data to the serial port. Customers can choose whether to filter HTTPD header data by AT command.

	_								
USR-G786-	-G V1.0.1		1						- 🗆 ×
File Languag	e Help						_		
[PC Serial Para	meters] : ComName CC	OM79 ∨ BaudRat	te 115200 v Par	ity/Data/Stop NONI 🗸	8 v 1	Close PC Seria	al ダ Load Fw 🗧	🖇 Start Fw	•
Choose Work N	Mode				Operation	and Hints			8
Trans	parent Mode 4	HTTPD Client N	Mode 🔾 SM	1S Mode	°3	🗟 Query all paramet	ters	틙 Sa	ve current parameters
	HTTP	НТТР	Serial	•	2	Enter Serial AT comman	d mode	Exit Se	rial AT command mode
HTTP server	r NetWo	ork N	M2M device	Serial device		Help message	Resta	rt	Query version
HTTPD Client M	lode parameters	-				Save as default	Restore d	efault	Reset to factory settings
		5		_		Ouery RSSI			
	HTTP request type	GEI	~		Ime	Hex RX:83327			ResetCount
	HTTP URI	/1.php[3F]			Operati	on complete			^
		- [>[Tx->][10:15:36][asc]			
	HITP server address	s test.usr.cn			AT+Z				
	HTTP server por	t 80							
	Quer Time (c)				>[Rx<-][10:15:36][asc]			
	Over Time (s	10			AT+Z				
	HTTP request Heade	r Connection: close[[0D][0A]						
		Filter HTTP Hea	ader		OK				
Modem Darama	ators				-				
Mouern Parame	scers				Operati	on complete			
Seri	ial Serial BaudRate	115200 ~			>[Rx<-][10:15:37][asc]			
6	Parity/Data/Sto	p NONE ~	8 ~	1 ~	[USR-G	786]			
More	kage Time Interval(n	ns)100 F	Package Length(Bytes) 1000					
	Enab	le Echo	MODBUS Change						¥
	Command F	Password www.usr.c	:n#						
	Welcome	Message [USR-G786	6]						
	7	APN CMNET,,,0							
	Auto Restart	Time(s) 1800			Send vi	a Serial Port 👻 🗌 Hex	TX:242		🧐 Send 👻

① Set parameters by software:

- 1. Open the setup software. Set the serial port parameters according to the serial device and click "Open PC Serial".
- 2. Click "Enter Serial AT command mode" and wait for the device to enter AT command mode.
- 3. Click "Query all parameters" and wait for obtaining all current parameters.
- 4. In "Choose Work Mode" column, select "HTTPD Client Mode".
- 5. Set HTTPD Client mode parameters.
- 6. Check "More".
- 7. If using an APN card, need to set the APN information.

Set APN parameter: CMNET, "0. E.g: APN: CMNET, username:empty, password:empty, authentication method: NONE.

- 8. Click "Save current parameters" to set and save all parameters.
- 9. Click "Restart" to restart the module.
 - ② Set by AT command:
- 1. Set the work mode to HTTPD: AT+WKMOD=HTTPD



- 2. Set the request type: AT+HTPTP=GET
- 3. Set HTTP URL:

AT+HTPURL=/1.php[3F]

Set the HTTP server address:

AT+HTPSV=test.usr.cn,80

- 5. Set HTTP request header:
 - AT+HTPHD=Connection: close[0D][0A]
 - Set HTTP over time:

AT+HTPTO=10

7. Whether to filter HTTP header:

AT+HTPFLT=ON

8. Reboot

4.

6.

AT+Z

③ Test

After the NET light is on, send the data in the format of "data =". After the data is sent successfully, server will return the data.

★ USR-G786-G V1.0.1				- 0 X
File Language Help				
[PC Serial Parameters] : ComName COM113 V BaudRate 115200 V Parit	y/Data/Stop NONI v 8	✓ 1 ✓ Close PC Serial	Load Fw Sta	rt Fw
Choose Work Mode		Operation and Hints		
○ Transparent Mode	S Mode	🗟 Query all paramete	rs	Save current parameters
HTTP HTTP Serial		Enter Serial AT command	mode	Exit Serial AT command mode
HTTP server NetWork M2M device	Serial device	Help message	Restart	Query version
HTTPD Client Mode parameters		Save as default	Restore default	Reset to factory settings
		Query RSSI		
HTTP request type GET 🗸		Time Hex RX:3609		ResetCount
HTTP URL /1.php[3F]		>[Tx->][14:55:12][asc]		
HTTP server address test.usr.cn		data=abcdefg	se	end
HTTP conver part Inc		>[Rx<-][14:55:15][asc]		
		abcderg ←	- receive	
Over Time (s) 10				
HTTP request Header Connection: close[0D][0A]				
Fiter HTTP Header				
Modem Parameters				
Serial Serial BaudRate 115200 V	^			
Parity/Data/Stop NONE V 8 V	1 ~			
✓ More cage Time Interval(ms) 100 Package Length(Bytes)	1000			
Enable Echo MODBUS Change				
Command Password www.usr.cn#		data=abcdefg		
Welcome Message [USR-G786]				
APN CMNE1,,,0 Auto Restart Time(s) 1800		Send via Serial Port 🖌 🗌 Hex	TX:30	🕘 Send 👻
	, v			



5.3. SMS Mode



In this mode, user's serial device can send SMS to the specified mobile phone and receive SMS from any mobile phone. User can decide whether to transmit the data of the specified mobile phone to the serial device through settings.

Users do not need to pay attention to the data conversion process between serial port data and SMS. They only need to set simple parameters to realize transparent data communication between mobile phones and serial port devices.

If the user's serial device is placed in a remote place, G786-G can be used to check the running status of the device or control the running parameters by sending and receiving SMS.

① Set by software:



Technical Support: h.usriot.com

★ USR-G786-G V1.0.1	– 🗆 X
File Language Help	
[PC Serial Parameters] : ComName COM79 V BaudRate 115200 V Parity/Data/Stop NONI 8	V 1 V Close PC Serial V Load Fw V Start Fw
Choose Work Mode	Operation and Hints 9
○ Transparent Mode ○ HTTPD Client Mode 4	3 Query all parameters Save current parameters
SMS ((())) SMS Serial	2 Enter Serial AT command mode Exit Serial AT command mode 10
Mobile Base station M2M device Serial device	Help message Restart Query version
SMS Mode parameters	Save as default Restore default Reset to factory settings
	Query RSSI
	Time Hex RX:83387 ResetCount
-	Operation complete ^
5 Destination phone number 10086	>[Tx->][10:19:21][asc]
6 Only receive SMS from source number	AT+Z
	>[Rx<-][10:19:22][asc]
	AT+Z
	OK
Modem Parameters	Operation complete
Serial Serial BaudRate 115200	>[Pv<-][10:10:73][acc]
7 Parity/Data/Stop NONE × 8 × 1 ×	[IISP-G786]
sage Time Interval(ms)100 Package Length (Bytes) 1000	
Enable Echo MODBUS Change	······································
Command Password www.usr.cn#	
Welcome Message [USR-G/86]	
Auto Restart Time(s) 1800	Send via Serial Port - Hex TX:242 🕘 Send -

- 1. Open the setup software. Setting the serial port parameters according to the serial device and click "Open PC Serial".
- 2. Click "Enter Serial AT command mode" and wait for the device to enter AT command mode.
- 3. Click "Query all parameters" and waiting for obtaining all current parameters.
- 4. In "choose work Mode", select "SMS Mode".
- 5. Set the destination phone number to "10086".
- 6. If need to filter SMS from other mobile numbers, enable "Only receive SMS from source number".
- 7. Click "More".
- 8. Set APN parameter: CMNET,,,0.
 - E.g: APN: CMNET, username:empty, password:empty, authentication method: NONE.
- 9. Click "Save current parameters" to set and save all parameters.
- 10. Click "Restart" to restart the module.
 - ② Set by AT command:
 - 1. Set work mode to SMS mode: AT+WKMOD=SMS
 - 2. Set the target mobile phone number to 10086. E.g:10086: AT+DSTNUM=10086
 - 3. Restart the module:
 - AT+Z



Note: 1. The target phone number of SMS should be added with the international number.

2. When non-target mobile phone number filtering is enabled, the non-target mobile phone number can still query or set parameters.

③ Test

When the NET light is on, we can send and receive data in both directions via SMS with destination phone number.

K USR-G786-G V1.0.1				_		×
le Language Help						
PC Serial Parameters] : ComName COM113 V BaudRate 115200 V Parity/Data/Stop NONI V	8 v 1 v Close PC Serial 🝕 L	pad Eur 🧭 Chart Eur				
hoose Work Mode	Operation and Hints		图片预览		-	
○ Transparent Mode ○ HTTPD Client Mode	Query all parameters	中国. 🗋 🖬 ". 🗐 🗟	0.00K/s	\$ 1	1 💷 上午	=10:59
	Enter Serial AT command mode	$\leftarrow \bigcirc$	+86 了 0	690	C	÷
Mobile Base station M2M device Serial device	Help message					
45 Mode parameters	Save as default		短信/彩信			
	Query RSSI		今天星期三			
	☐ Time ☐ Hex RX:1103	abcdefg				
	>[Tx->][10:58:50][ase]					
Destination phone number 132.073°25	abcdefg	同川同川				
Only receive SMS from source number	>[Rx<-][10:59:06][asc]					
	123456			_	<u>12345</u>	<u>6</u>
	_					NN
lodem Parameters						
Serial Serial BaudRate 115200 V						
Parity/Data/Stop NONE v 8 v 1 v						
kage Time Interval(ms)100 Package Length(Bytes) 1000						
Enable Echo MODBUS Change						
Command Password www.usr.cn#						
Welcome Message [USR-G786]						
APN CMNET,,,0	abcdefg					
Auto Restart Time(s) 1800						
	Send via Serial Port + Hex TX:21					



6. General Function

6.1. Identity Package



In network transparent mode, user can set the device to send identity package to the server. Identity package is intended to allow the server to identify the data from which device or to use it as a password to obtain authorization for the server's functions. Identity package can be sent when the module establishes a connection with the server, or be added at the forefront of each data packet to form a data packet to be sent to the network. Identity package data can be ICCID code, IMEI code, or User-defined data.

ICCID: Unique SIM identification code, for applications based on SIM card identification.

IMEI: Unique identification code of the Internet module, which is mainly used in device identification, has nothing to do with SIM card.

① Set by software:



Technical Support: h.usriot.com

😤 USR-G786-G V1.0.1	- 🗆 X
File Language Help 1	
[PC Serial Parameters] : ComName COM21 V BaudRate 115200 V Parity/Data/Stop NONI	8 v 1 v Den PC Serial Grad Fw Grad Fw
Choose Work Mode	Operation and Hints 9
4 Transparent Mode HTTPD Client Mode SMS Mode	3 🔄 Query all parameters
TCP/UDP Serial	2 Enter Serial AT command mode Exit Serial AT command mode
PC NetWork M2M device Serial device	Help message Restart Query version
Transparent Mode parameters	Save as default Restore default Reset to factory settings
Socket A 5 IP&Port 39.1 4562 Link Type TCPC V	Query RSSI
Over Time (s) 5	Time Hex RX:3294 ResetCount
 Enable Enable Heartbeat Package Reg Package Send Type Send register data as the ∨ Package Reg Package Data Type User-defined data ∨ User-defined data 	<pre>>Tx >> Operation complete >[Tx->][12:01:33][asc] AT+Z >[Rx<-][12:01:33][asc] AT+Z OK </pre>
Modem Parameters	>[Rx<-][12:01:33][asc]
Serial Serial BaudRate 115200 ∨ Parity/Data/Stop NONE ∨ 8 ∨ 1 ∨ ✓ More cage Time Interval(ms)100 Package Length(Bytes) 1000 ✓ Enable Echo □ MODBUS Change Command Password Wew.usr.cn# Welcome Message [USR-6786]	^ [USR-G786]
8 APN [CMNET,,,0 Auto Restart Time(s) 1800	Send via Serial Port • Hex TX:164 Send •

1. Open the setup software.Set the Serial port parameters according to the actual serial device and click "Open PC Serial".

2. Click "Enter Serial AT command mode" and wait for the device to enter AT command mode.

- 3. Click "Query all parameters" and wait for obtaining all current parameters.
- 4. In "Choose Work Mode", select "Transparent Mode".
- 5. Set the parameter of SocketA.
- 6. Enable identity package and set various parameters.
- 7. Click "More".
- 8. Set APN parameters.
- 9. Click "Save current parameters" to save all parameters.
- 10. Restart the module.



② Set by AT command:

Command	Function	Default
AT+REGEN	Query/setting enable identity package	OFF
AT+REGTP	Query/setting the type of identity package content	USER
AT+REGDT	Query/setting user-defined information	7777772E7573722E636E
AT+REGSND	Query/setting the sending mode of identity package	DATA

1. Enable identity package function:

AT+REGEN=ON

2. Set the type to User-defined data:

AT+REGTP=USER

3. Setup the contents:

AT+REGDT=7777772E7573722E636E

Setup the sending mode:

AT+REGSND=DATA

5. Reboot:

4.

AT+Z

3 Test

Connect the serial port of USR-G786-G to the computer via a serial to USB cable, send data from serial port:



6.2. Heartbeat Package

Jinan USR IOT Technology Limited





In network transparent mode, user can send the heartbeat package from the module to meet specific requirements.

Heartbeat package can be sent to the network or serial port device . The main purpose of sending to the network is to keep the connection stable and reliable, to ensure the normal connection of the module, and at the same time, to let the server know the online status of the module.

In the application of fixed query commands sent by the server to the device, in order to reduce communication traffic, user can choose to send heartbeat package (query commands) to the serial device instead of sending query commands from the server, so as to save traffic and respond faster.



① Set by software:

- 1. Open the dedicated setup software. Set the Serial port parameters according to the serial device and click "Open PC Serial".
- 2. Click "Enter Serial AT command mode" and wait for the device to enter AT command mode.
- 3. Click "Query all parameters" and wait for obtaining all current parameters.



- 4. In "Choose Work Mode", select "Transparent Mode".
- 5. Set the parameters of Socket A.
- 6. Enable heartbeat package function and set various parameters.
- 7. Click "More".
- 8. Set APN parameters.
- 9. Click "Save current parameters" to set and save all parameters.
- 10. Restart the module.

② Set by AT command:

Command	Function	Default parameter
AT+HEARTEN	Query/Setting enable heartbeat package	ON
AT+HEARTDT	Query/Setting heartbeat data	7777772E7573722E636E
AT+HEARTSND	Query/Setting heartbeat package sending mode	NET
AT+HEARTTM	Query/Setting heartbeat package interval	30

1. Enable heartbeat function:

AT+HEARTEN=ON

2. Setup the contents of heartbeat data:

AT+HEARTDT=7777772E7573722E636E

3. Set the mode of heartbeat data:

AT+HEARTTP=NET

4. Setup the sending interval:

AT+HEARTTM=30

5. Reboot:

AT+Z

3 Test

Heartbeat package data sent from G786-G to the network:



est, Do Best !	USR-G786-G User Manual	Technical Support: h.usriot.com
	TCP/UDP Net Assistant	
Settings (1) Protocol TCP Server (2) Local host addr (3) Local host port (4562 (3) Local host addr (3) Local host addr (5) Local host port (5) Local host port (Data Receive WWW. USF. OR Data Send Clients: http://www.emsoft.on	Image: State
Shortcut History		Send
IF Ready!	5/0 R3	X:50 TX:0 Reset

6.3. Base Station Position

USR-G786-G supports LBS base station positioning function, and can obtain general location of the device through the operator's network. Base station positioning information is obtained through AT command, which can be used flexibly with serial AT and SMS AT command.

AT command				
Command	Function	Default parameter		
AT+LBS	Query station positioning information	Empty		

Note: This function does not obtain positioning information directly(E.g. latitude and longitude information), but base station location information. Users need to obtain direct positioning information through calculation on a third-party platform. Third-party location information services are generally require charges. User can go to the URL to convert the actual location to test:

http://www.minigps.net/cellsearch.html (This URL is for testing only and does not guarantee site stability) Query interface is shown below:



Technical Support: h.usriot.com



Click the query to get the converted location information



6.4. Modbus



In network transparent mode, if the terminal device transmits data through Modbus RTU protocol and the server communicates through Modbus TCP protocol, user can enable Modbus function. After this function is enabled, G786-G converts the Modbus TCP protocol data sent by the server into Modbus RTU data and sends it to the terminal device, and converts the Modbus RTU protocol data sent by the terminal device into Modbus TCP data and sends it to the server.

① Set by software:



Technical Support: h.usriot.com

😤 USR-G786-G V1.0.1		- 🗆 X
File Language Help 1		
[PC Serial Parameters] : ComName COM21 v BaudRate 115200 v Parity/Data/Stop NONI v	8 \sim 1 \sim Close PC Serial $\stackrel{<}{>}$ Load Fw $\stackrel{<}{>}$	Start Fw
Choose Work Mode	Operation and Hints	9
4 Transparent Mode O HTTPD Client Mode O SMS Mode	3 Query all parameters	🔚 Save current parameters
TCP/UDP Serial	2 Enter Serial AT command mode	Exit Serial AT command mode
PC NetWork M2M device Serial device	Help message Restart	Query version
Transparent Mode parameters	Save as default Restore defa	ault Reset to factory settings
Socket A 5 1P&Port 39 4562 Link Type TCPC	A Query RSSI	
Over Time (s) 5	☑ Time	ResetCount
Enable Fenable Heartbeat Package	Operation complete >[Tx->][12:23:02][asc] AT+Z >[Rx<-][12:23:02][asc] AT+Z	
Modem Parameters	OK	
Serial BaudRate 115200 V 6 More Cage Time Interval(ms)100 Package Length(Bytes) 1000 Command Password www.usr.cn#	<pre> Operation complete >[Rx<-][12:23:02][asc] [USR-G786] </pre>	v
Welcome Message [USR-G786] 8 APN CMNET,,,0 Auto Restart Time(s) 1800	y Send via Serial Port → ☐ Hex TX:164	🖉 Send 👻

- 1. Open the dedicated setup software. Set the serial port parameters according to the serial device and click "Open PC Serial".
- 2. Click "Enter Serial AT command mode".
- 3. Click "Query all parameters", waiting to get all current parameters.
- 4. In "Choose Work Mode", check "Transparent Mode"
- 5. Set the parameters of Socket A.
- 6. Click "More".
- 7. Check "MODBUS Change".
- 8. Set the APN parameters.
- 9. Click "Save current parameters" to set and save all parameters.
- 10. Click "Restart" to restart the module.
 - ② Set by AT command:

Command	Functions	Default parameter
AT+MODBUSEN	Query/Setting whether to enable Modbus function	OFF

1. Set work mode to Transparent mode.: AT+WKMOD=NET



2. Enable Socket A:

AT+SOCKAEN=ON

3. Set socket A to TCP Client:

AT+SOCKA=TCP,test.usr.cn,2317

4. Enable Modbus protocol conversion:

AT+MODBUSEN=ON

- 5. Restart the module:
 - AT+Z
- 3 Test

Connect the serial port of USR-G786-G to the computer via a serial to USB cable, Modbus RTU data sent by the serial port is converted into MODBUS TCP data by G786-G and then sent to the network side. Similarly, G786-G converts the MODBUS TCP data on the network side into MODBUS RTU data and transmits it to the serial port.



6.5. FTP Upgrade





G786-G supports FTP upgrade protocol, user's device can request files on FTP server by special protocol through serial port. The file of the server can be split into small packets with a maximum size of 256 bytes for transmission, which is convenient for customer device to upgrade or download large files remotely. For details, please refer to "USR FTP Upgrade protocol".

6.6. Restore to Factory Default Settings

After power on, press the "Reload" button for 3~15S and release it to restore the device parameters to factory default parameters.



6.7. Upgrade Firmware

6.7.1. Upgrade by Serial Port

In order to reduce the complexity of firmware upgrade, USR-G786-G has set up the firmware upgrade with serial ports. As follows:



Technical Support: h.usriot.com

(1) Set baud rate to 115200, no check bit, data bit 8, stop bit 1, open serial port, click "Load Fw", and select the firmware to be upgraded.



(2) Follow the prompts and wait for the device to be upgraded.



Technical Support: h.usriot.com



(3) Now the firmware is being downloaded, waiting for the upgrade to complete.



Technical Support: h.usriot.com

USR-G786-G	V1.0.1					- 🗆 ×
File Language	Help					
[PC Serial Parame	eters] : ComName COM79 V B	audRate 115200 🗸 Pa	arity/Data/Stop NONI $\scriptstyle{\smallsetminus}$	8 v 1 v Close PC Seria	al 🗧 Goad Fw 🗧 Star	t Fw
Choose Work Mod	de			Operation and Hints		
Transpar	rent Mode 🔿 HTTPD	Client Mode 🛛 S	SMS Mode	🗟 Query all paramet	ters	Save current parameters
		DP Seria		Enter Serial AT command	d mode	Exit Serial AT command mode
PC	NetWork	M2M device	Serial device	Help message	Restart	Query version
Transparent Mode	parameters			Save as default	Restore default	Reset to factory settings
Enable Socket A	IP&Port	test.usr.cn	2317	Query RSSI		
	Over Time (s)	5		✓ Time ☐ Hex RX:83858		ResetCount
Enable Socket B				>[Warn][10:49:04] First click "Enter Serial AT co >[Tx->][10:50:04][asc]	mmand mode", the	n dick "Start Fw"
Enable Heartbeat Package				>[Rx<-][10:50:05][asc] a >[Tx->][10:50:05][asc]		
Enable				<pre>v >[Rx<-][10:50:05][asc]</pre>		
Modem Paramete	rs			= +ok		
Serial	Serial BaudRate 115200 Parity/Data/Stop NONE cage Time Interval(ms)100	 ✓ 8 ✓ Package Length(Byte) 	1 ~ 25) 1000	Operation complete Module request to send Sending		
	Enable Echo	MODBUS Chang	e			<u> </u>
	Command Password www Welcome Message [USI APN CMN	w.usr.cn# R-G786] ET,,,0				
	Auto Restart Time(s) 180	0		Send via Serial Port 👻 🗌 Hex	TX:242	🕘 Send 🗸

(4) Firmware update is completed and the device is restarted.



Technical Support: h.usriot.com

😤 USR-G786-G V1.0.1		– 🗆 X
File Language Help		
[PC Serial Parameters] : ComName COM79 v BaudRate 115200 v Parity/Data/Stop NONI v	8 \sim 1 \sim Close PC Serial \checkmark Load Fw	😴 Start Fw
Choose Work Mode	Operation and Hints	
Transparent Mode HTTPD Client Mode SMS Mode	Query all parameters	Save current parameters
TCP/UDP Serial	Enter Serial AT command mode	Exit Serial AT command mode
PC NetWork M2M device Serial device	Help message Res	start Query version
Transparent Mode parameters	Save as default Restore	e default Reset to factory settings
Socket A IP&Port test.usr.cn 2317	Query RSSI	
Unk Type TOPC ~ Over Time (s) 5	Time Hex RX:83870	ResetCount
Enable Socket B Enable	Operation complete Module request to send Sending Firmware upgrade success	
Modem Parameters	Used time (s): 67	
Serial BaudRate 115200 V Parity/Data/Stop NONE V Kage Time Interval(ms)100 Package Length(Bytes) 1000	 >[Rx<-][10:51:21][asc] [USR-G786]	
Enable Echo MODBUS Change Command Password WWW.USF.Cn#		V
Welcome Message [USR-G786]		
Auto Restart Time(s) 1800	Send via Serial Port + Hex TX:242	🔍 Send 🕞

6.7.2. Remote Upgrade

G786-G queries by polling, request the server once every 30 minutes by default to get whether there is an upgrade demand. If the upgrade is needed, the firmware data will be downloaded from the server for the upgrade; if not, the system will sleep and wait for the next round. The polling time of Fota upgrade can be set through "AT+FOTATIME" with a range of $10\sim65535$. Set to 0 to close the upgrade request.

7. AT Command Set

7.1. AT Command Examples

When the device works in network transparent mode, can switch to "AT command mode" by sending time-specific data by serial port. When the operation is completed in "AT command mode", send specific commands to return to the previous working mode.





Diagram 1 Toggles the timing of command

Toggles the timing of command mode:

In the figure above, the horizontal axis is time, data above the time axis is sent by the serial device to G786-G, data below the time axis is sent by G786-G to the serial port.

Time requirement:

T1 > current serial port packaging interval (refer to AT+UARTFT)

T2 < current serial port packaging interval time (refer to AT+UARTFT)

T3 < current serial port packaging interval time (refer to AT+UARTFT)

T4 = current serial port packaging interval time (refer to AT+UARTFT)

T5 < 3 s

T6 = current serial port packaging interval time (refer to AT+UARTFT)

The time sequence of switching from Transparent mode to "AT Command mode" :

Serial device continuously sends "+++" to the device. After receiving "+++", the device will send an "a" to the serial device. No data can be sent during a packaging cycle before sending "+++".

When the serial device receives "a", a "a" must be sent to the device within 3 seconds.

After receiving 'a', the device returns "+ok" and enter "temporary command mode".

After receiving "+ok", the device has enter "temporary command mode" and now can send AT command to it.

Time sequence of switching from AT command mode to network transparent mode:

Serial device sends "AT+ENTM" to G786-G.

After receiving the command, sends "OK" to the serial device and returns to the previous working mode. After the serial device receives "OK", it knows that the device has returned to its previous working mode.

7.1.1. Serial AT Command

In transparent mode, do not need to switch to the command mode, we can use "password + AT command" to query and set parameters. Generally, it is used when user's equipment needs to query or modify parameters when G786-G is running. It does not need complicated "+++" timing sequence to enter AT command mode, so as to quickly query or set parameters.



Be Honest, Do Best !	USR-G786-G User Manual Technical Support: h.usric	ot.com
Serial ☑ More	Serial BaudRate 115200 ~ Parity/Data/Stop NONE ~ 8 ~ 1 ~ kage Time Interval(ms) 100 Package Length(Bytes) 100 100	
	Command Password www.usr.cn#	
	Welcome Message [USR-G786]	
	APN AUTO,,,0	
	Auto Restart Time(s) 1800	

Diagram 2 Software schematic diagram

Query current password, query/setting command: AT+CMDPW

We can check the current command password by setup software is: <u>www.usr.cn#</u>

After the setting is completed, restart the module, and send <u>www.usr.cn#AT+VER</u> (Note: there is an Carriage Return at the end of the string) from the serial port to the module. After receiving the string, module will return the response information.

USR-G786-G	V1.0.1							- 🗆 ×
File Language	Help							
[PC Serial Param	eters] : ComName COM79 🛛 🗸	BaudRate 115200 ~	Parity/Data/Stop NONI 🗸	8 ~ 1	Close PC Serial	😽 Load Fw 😽 St	tart Fw	
Choose Work Mo	de			Operation	and Hints			
Transparent	arent Mode 🛛 HTTP	D Client Mode () SMS Mode	•	🗟 Query all paramete	ers	🔚 Save curre	ent parameters
					Enter Serial AT command	mode	Exit Serial AT	command mode
PC	NetWork	M2M device	Serial device		Help message	Restart		Query version
Transparent Mod	e parameters				Save as default	Restore defau	lt Re	set to factory settings
Enable Socket A	IP&Port	test.usr.cn	2317	^	Query RSSI			
	Link Type Over Time (s)	TCPC 5	~	✓ Time	Hex RX:58	7	*	ResetCount
Enable Socket B				>[Tx->] www.us	[11:03:03][asc] r.cn#AT+VER [11:03:03][asc]	2		
Enable				+VFR·V		-		
Modem Paramet	ers			· vert. v	1.0.00.000000.0000			
Serial	Serial BaudRate 115200 Parity/Data/Stop NONE cage Time Interval(ms)100	✓ 8 ✓ Package Length(E)	1 ~ ytes) 1000	^				
	Enable Echo	MODBUS Cha	nge		· · · · · ·			
	Command Password W Welcome Message [U APN C	ww.usr.cn# ISR-G786] INET0		www.us	r.cn#AT+VER	1		
	Auto Restart Time(s)	300		↓ Send via	Serial Port 🔹 🗌 Hex	TX:19		🧶 Send 🕞



7.1.2. Network AT Command

Network AT command refers to set and query parameters by sending "password + AT command" through the network when working in transparent mode. Network AT command is similar to serial AT command. The difference is that network AT command is issued through the network, which is used for remote inquiry or parameter modification by customer's server. Customers can use the network AT command for batch parameter modification and query, which is convenient for managing owned equipment.

For example, query the firmware version and send www.usr.cn#AT+VER (note: there is an Carriage Return at the end of the string) from the server to the module. After receiving the command, the module will return a response message:





7.1.3. SMS AT Command

SMS AT command means that we can use SMS to query and configure the parameters of G786-G.

SMS AT command is generally used when customers need to query or modify parameters temporarily. We can query and modify parameters as long as know the phone number of the device, which is very convenient for equipment management in remote areas.

Take the query of firmware version as an example, send AT command. Send "www.usr.cn#AT+VER" (Note: there is an Carriage Return at the end of the string) from the mobile phone to the module. After receiving it, the module will return the response information as shown in the figure below:



7.1.4. Command Format

AT command is "query and reply" command, divided into "query" and "reply" two parts."Query" means that the device sends an AT command to G786-G, and "reply" means that G786-G sends a reply to the device. Note: characters in instructions are case-insensitive.

7.1.4.1 Symbol Introduction

Figure 9 Symbol introduction			
Symbol	Implication		
<>	The content is essential items		
0	The content is non-essential items		
{}	The content is a string with special meaning		
~	Parameter range, e.g. A \sim B. Parameter 's range is from A to B		
CMD	Command code		
OP	The operator		
PARA	Parameters		
CR	Carriage Return in ASCII, 0X0D in hex		

Figure 9 Symbol introduction



7.1.4.2 Query format in command

Command string: <AT+>[CMD][OP][PARA]<CR>

Figure 10 symbol description					
Command code	Implication	Necessary or not			
AT+	AT command header	YES			
CMD	Command name	NO			
ОР	Operator, such as =,?	YES			
PARA	Executed Parameter	NO			
CR	Carriage Return, command	YES			
	terminator				

Command type description

Figure 11 Command string format description

Туре	String format	Description
0	<at+><cmd>?<cr></cr></cmd></at+>	Query current parameters
1	<at+><cmd><cr></cr></cmd></at+>	Execute the action of this command or query current parameters
2	<at+><cmd>=<para><cr></cr></para></cmd></at+>	Set this command's parameter

7.1.4.3 Reply format in command

Note: the response information of the command can be divided into two types: echo and no echo. Echo means to return the input content when the command is input, and then make a response to the command. No echo means no input is returned and only the command is responded to. In the following instructions, no echo mode is used as an example.

Command String: [CR][LF][+CMD][OP][PARA][CR][LF]<CR><LF>[OK]<CR><LF>

Figure 11 Symbol descriptions Implication



Response command type description:

Figure 13	The description of string format
I Igui C I J	The description of string for mat

Туре	String Format	Description
0	<cr><lf><ok><cr><lf></lf></cr></ok></lf></cr>	Means command send success
1	<cr><lf><+CMD:><para><cr><lf><cr><lf><ok><cr><lf></lf></cr></ok></lf></cr></lf></cr></para></lf></cr>	Return current parameters

7.1.4.4 Special symbols

In AT commands, "=", ",", "?", carriage return, line feed are special symbols, so the parameter can not directly contain "=", ",", "?". All need to be escaped.

Escape rule: use [] to enclose the hexadecimal code of a special symbol, representing the ASCII code represented by an input hexadecimal code.

E. g:

"?": The hexadecimal encoding of 0x3F is expressed as [3F] after escaping by this escape method.

Symbol	Implication	Escape characters
=	Equal sign	[3D]
,	Comma	[2C]
?	Question mark	[3F]
<cr></cr>	Enter key	[OD]
<lf></lf>	Line break	[0A]

7.2. AT Command Set

rigure 15 Al command el loi code	Figure 15	AT command error code
----------------------------------	-----------	-----------------------

Code	Implication
Err1	Does not conform to the AT commands format, is not the beginning of AT
Err2	The AT command was not found and does not exist
Err3	Not meet the format of query or settings
Err4	Wrong parameters or number
Err5	Setting parameter failed

Figure 16 AT commands

Command	Command description
	Executive command
АТ	Test Command
Н	Help information
Z	Module reboot
Е	Query/set whether to enable command echo



	1.451101.0011
ENTM Exit AT command mode	
WKMOD Query/set work mode	
CMDPW Query/set command password	
STMSG Query/set module start information	
RSTIM Query/set the time of equipment automatically restart	
CSQ Query signal strength information of device currently	
SYSINFO Query network information of device	
UCPIN Query/set PIN code	
Query/set query commands	
RELD Restore to the user default settings	
CLEAR Restore original factory settings	
CFGTF Save current settings to default settings	
Query/set information query commands	
VER Query version information	
SN Query SN code	
ICCID Query ICCID code	
IMEI Query IMEI code	
CIP Query IP address	
LBS Query base station positioning information	
CCLK Query current time	
PING Query the network status	
Serial parameter commands	
UART Query / set the parameters of serial ports	
CMDPTQuery/set network data output serial port	
UARTFT Query/set serial port package time	
UARTFL Query/set the serial port package length	
Network commands	
APN Query/set APN information	
SOCKA Query/set socket A parameter	
SOCKB Query/set socket B parameter	
SOCKAEN Query/setup whether to enable socket A	
SOCKBEN Query/setup whether to enable socket B	
SOCKALK Query socket A connection status	
SOCKBLK Query socket B connection status	
SOCKATO Query/set reconnect time after disconnection of socket A	
SOCKBTO Query/set reconnect time after disconnection of socket B	
SOCKRSTM Query/Set the max number of reconnect when socket connection	n
failure	
MODBUSEN Query/set whether to enable Modbus protocol conversion	
Identity package commands	
REGEN Query/set whether to enable identity package	
REGTP Query/set the content type of identity package	
REGDT Query/set user-defined identity package data	



ionest	, Do Best !	USR-G786-G User Manual	Technical Support: h.usriot.com
	REGSND	Query/set identity package sending type	
		Heartbeat package commands	
	HEARTEN	Query/set whether to enable heartbeat	
	HEARTDT	Query/set heartbeat package data	
	HEARTSND	Query/set heartbeat package sending type	
	HEARTTM	Query/set heartbeat package sending interval	
		HTTPD commands	
	AT+HTPTP	Query/set HTTP request type	
	AT+HTPURL	Query/set URL	
	AT+HTPSV	Query/set HTTP server address and port	
	AT+HTPHD	Query/set HTTP request header	
	AT+HTPTO	Query/set HTTP timeout	
	AT+HTPFLT	Query/set whether to filter HTTP header	
SMS commands			
	DSTNUM	Query/set the target mobile phone number of S	SMS mode
	SMSFLT	Query/set whether to enable only receive SMS	from source number
	CISMSSEND	Send SMS	

7.2.1.AT

- > Function: Test commands to test whether the current device is active
- Format
 - Query: AT{CR}

 $\{CR\}\{LF\}OK\{CR\}\{LF\}$

7.2.2.AT+H

- Function: Helping command
- ➢ Format
 - Query:

AT+H{CR}

{CR}{LF} help message {CR}{LF}

- > Parameter:
 - ◆ help message: command.

7.2.3.AT+Z

- ➢ Function: Reload the module.
- Format
 AT+Z{CR}
 {CR}{LF}OK{CR}{LF}

7.2.4.AT+E

Function: Query/set the echo status of AT commands.

Jinan USR IOT Technology Limited



Format:

- Query current parameter: AT+E{CR} or AT+E?{CR} {CR}{LF}+E:status{CR}{LF}
- Setting:
 AT+E=status{CR}

 $\{CR\}\{LF\}OK\{CR\}\{LF\}$

- > Parameter:
 - status: echo status, including:
 ON: open
 OFF: close

Command echo default is on.

► E.g: AT+E=ON

7.2.5.AT+ENTM

- > Function: set the device to return to the previous working mode.
- ➢ Format:
 - Perform specified function: AT+ENTM{CR} {CR}{LF}OK{CR}{LF}

7.2.6.AT+WKMOD

- > Function: Query/Setting module's work mode
- ➢ Format:
 - Query current parameter: AT+WKMOD{CR} or AT+WKMOD?{CR} {CR}{LF}+WKMOD:mode{CR}{LF}
 - Setting: AT+WKMOD=mode{CR} {CR}{LF}OK{CR}{LF}
- > Parameter:
 - mode: work mode, including: NET: Network transparent mode HTTPD: HTTPD Client mode SMS: SMS mode

Default in NET mode:

► E.g: AT+WKMOD=NET

7.2.7.AT+CMDPW

- Function: Query/Setting command password
- ➢ Format:
 - Query current parameter:
 AT+CMDPW{CR} or AT+CMDPW?{CR} {CR}{LF}+CMDPW:password{CR}{LF}



 Setting: AT+CMDPW=password{CR}

```
{CR}{LF}OK{CR}{LF}
```

- > Parameter:
 - password: Command password, 1~11 bytes ASCII code, default is www.usr.cn#.
- E.g: AT+CMDPW=www.usr.cn#

7.2.8.AT+STMSG

- Function: Query/Setting module's welcome message.
- ➢ Format:
 - Query current parameter:
 AT+STMSG{CR} or AT+STMSG?{CR} {CR}{LF}+STMSG:message{CR}{LF}
 - Setting: AT+STMSG=message{CR} {CR}{LF}OK{CR}{LF}
- > Parameter:
- ◆ message: Welcome message, after the device is powered on. ASCII of 1~20 bytes, default is [USR-G786].
- E.g:AT+STMSG=www.usr.cn

7.2.9.AT+RSTIM

- > Function: Query/Setting module's automatic restart time.
- ➢ Format:
 - Query current parameter:
 AT+RSTIM{CR} or AT+RSTIM?{CR} {CR}{LF}+RSTIM:time{CR}{LF}
 - Setting: AT+RSTIM=time{CR} {CR}{LF}OK{CR}{LF}
- Parameter:
- Time: s. Range can be set from 60s to 60000s. When the network does not respond to data longer than this time, device will restart. The default time is 1800s. When the parameter is set to 0, this function is disabled.
- ► E.g: AT+RSTIM=1800

7.2.10. AT+CSQ

- ➢ Function: Query module's current signal strength.
- ➢ Format:
 - Query current parameter
 AT+CSQ{CR} or AT+CSQ?{CR}
 {CR}{LF}+CSQ: rssi {CR}{LF}
- Parameter:
 - rssi: Received signal strength information.

Figure 1 Mapping relation



Be Honest, Do Best !	USR-G786-G User Manu	ual Technical Support: h.usriot.com
	Number	Implication
0		Less than -113 dBm
1		-111 dBm
231		-10953 dBm
99		Unknown or unmeasured

7.2.11. AT+SYSINFO

- ▶ Function: Query module 's network information
- ➢ Format:
 - Query current parameter: AT+SYSINFO{CR} or AT+SYSINFO?{CR} {CR}{LF}+SYSINFO: state,srv_domain ,roam_status,sys_mode,sim_state{CR}{LF}
- > Parameter
 - state: current network status

Figure 2 Sever status list

	Number	Implication
0		No service
1		Restricted service
2		Network service
3		Restricted regional services
4		Power saving state

srv_domain: business domain

Figure 3 Business domain list

	Number	Implication
0		No service
1		Only CS service
2		Only PS service
3		PS+CS service
4		CS,PS is not registered and is in the search state

- roam_status: Roaming state
 - 0: Non-roaming state
 - 1: Roaming state
- sys_mode: System mode

Figure 4 System mode list

Number	Implication
0	No service
1	AMPS mode
2	CDMA mode
3	GSM mode
4	HDR mode
5	WCDMA mode
6	GPS mode
7	GSM/WCDMA mode



Be Honest, Do Best !	USR-G786-G User Manual	Technical Support: h.usriot.com
8		CDMA/HDR mixed mode
9		LTE mode
10		GSM/WCDMA/LTE mode
11		TDS mode

sim_state: UIM state.

Figure 5 UIM status list

Number	Implication
0	UIM card status is invalid
1	UIM card status is effective
2	UIM card status is invalid under CS
3	UIM is invalid under PS
4	UIM is invalid under PS+CS
240	ROMUIM version
255	UIM card not exist

7.2.12. AT+UCPIN

Function: Query/Setting PIN code.

- Function: Query/Setting PIN code
- Format
 - Query current parameter:
 AT+UCPIN{CR} or AT+UCPIN?{CR} {CR}{LF}+UCPIN:pin{CR}{LF}
 - Setting: AT+UCPIN=pin{CR} {CR}{LF}OK{CR}{LF}
- > Parameter:
 - pin: PIN code, default is empty.
- ▶ E.g: AT+PIN=1234

7.2.13. AT+RELD

- > Function: Restore to default settings and the device will restart.
- ➢ Format:
 - Execute the specified function AT+RELD{CR} {CR}{LF}OK{CR}{LF}

7.2.14. AT+CLEAR

- > Function: Reload the default settings, device will restart.
- ➢ Format:
 - Execute specified function: AT+CLEAR{CR} {CR}{LF}OK{CR}{LF}



7.2.15. AT+CFGTF

- > Function: Save current parameter to default parameter.
- ➢ Format:
 - Execute specified function: AT+CFGTF{CR} {CR}{LF}OK{CR}{LF}

7.2.16. AT+VER

- Function: Query module's firmware version.
- ➢ Format:
 - Query current parameter: AT+VER{CR} or AT+VER?{CR} {CR}{LF}+VER:version{CR}{LF}
- > Parameters:
 - version: Firmware version.

7.2.17. AT+SN

- Function: Query module's SN code.
- ➢ Format:
 - Query current parameter:
 AT+SN{CR} or AT+SN?{CR}
 {CR}{LF}+SN:code{CR}{LF}
- > Parameters:
 - ♦ code:SN code

7.2.18. AT+ICCID

- ➢ Function: Query module's ICCID code.
- ➢ Format:
 - Query current parameter:
 AT+ICCID{CR} or AT+ICCID?{CR}
 {CR}{LF}+ICCID:code{CR}{LF}{CR}{LF}
- > Parameters:
 - code: ICCID code.

7.2.19. AT+IMEI

- Function: Query module's IMEI code.
- ➢ Format:
 - Query current parameter:
 AT+IMEI{CR} or AT+IMEI?{CR}
 {CR}{LF}+IMEI:code{CR}{LF}
- Parameters:
 - code: IMEI code.



7.2.20. AT+CIP

- > Function: Query local IP address.
- ➢ Format:
 - Query current parameter:
 AT+CIP{CR} or AT+CIP?{CR}
 {CR}{LF}+CIP: IP {CR}{LF}
- > Parameters:
 - ♦ IP: local IP address.

7.2.21. AT+LBS

- Function: Query base station positioning.
- ➢ Format:
 - Query:
 - AT+LBS{CR}

```
{CR}{LF}+IMEI : <lac>,<cid>{CR}{LF}
```

- Parameters:
- ◆ <lac>: LAC information, Range: 1~65535
- ◆ <cid>: CID information, Range: 2G: (1-65535) 3G/4G (1~268435455)
- ► E.g: AT+LBS

7.2.22. AT+CCLK

- Function: Query current time.
- Format:

♦ Query:

AT+CCLK{CR}

{CR}{LF}+CCLK: <lac>,<cid>{CR}{LF}

- Parameters:
- ◆ <data>: Data information
- ◆ <time>: Time information
- ► E.g: AT+CCLK

7.2.23. AT+PING

- Function: Query network continuity.
- ➢ Format:
 - Query:
 - AT+PING="ip_address"{CR}
 - {CR}{LF}+PING: <result>,<ip_adress>, <bytes>, <time>, <ttl>{CR}{LF}
 - {CR}{LF}+PING: <finresult>, <sent>, <rcvd>, <lost>, <min>,<max>,<avg>{CR}{LF}
- Parameters:
 - <result>: The result of each ping request. 0 means success.
 - <ip_address>: IP address.



- <bytes>: The length of each sent ping request. Unit: byte.
- <time>: The time wait for the response of the ping request. Unit: ms.
- <ttl>: Time to live value of the response packet for the ping request.
- <finresult>:The final result of the command. 0 means success.
- <sent>: Total number of sent ping requests.
- <rcvd>: Total number of the ping requests that received the response.
- <lost>: Total number of the ping requests that are timeout.
- <min>: The minimum response time. Unit: ms.
- <max>: The maximum response time. Unit: ms.
- ◆ <avg>: The average response time. Unit: ms.
- ➢ E.g: AT+PING="www.baidu.com"

7.2.24. AT+UART

- Function: Query/Setting serial port parameters
- ➢ Format:
 - AT+UART{CR} or AT+UART?{CR}
 - {CR}{LF}+UART:baud,data bit,stop bit,parity {CR}{LF}
 - Setting: AT+UART=baud,data bit,stop bit,parity {CR} {CR}{LF}OK{CR}{LF}
- > Parameters:
- Baud:band rate:2400,4800,9600,14400,19200, 28800, 33600,38400,57600,115200,230400,460800
 Default rate 115200.
 - ♦ data bit: data bit, inclouding:
- 8: 8 data bits.
 - Default data bit :8.
 - stop bit: stop bit, including:
- 1: 1 stop bit.
- 2: 2 stop bits.

Default 1 stop bit.

- parity: Checking methods, including:
 - NONE: NO check.
 - ODD: ODD check.
 - EVEN: EVEN check.
 - Default is NONE.
- ► E.g:: AT+UART=115200,8,1,NONE.

7.2.25. AT+CMDPT

- > Function: Query /Setting network data output port.
- ➢ Format:
 - AT+CMDPT{CR} or AT+CMDPT?{CR} {CR}{LF}+CMDPT: {CR}{LF}



```
Setting:
AT+CMDPT=port{CR}
{CR}{LF}OK{CR}{LF}
```

Parameters:

♦ Port

RS232 RS485

RSALL

Default is RSALL.

Note: If set to RS232, network data will only be output on RS232 port. Set to RS485, network data will only be output on RS485 port. Set to RSALL, network data will be output on both RS232 and RS485 ports. In order to ensure the data output efficiency, please choose one serial port as the network data output port according to the actual application needs.

➢ E.g: AT+CMDPT=RS232

7.2.26. AT+UARTFT

- > Function: Query/Setting serial port packaging interval.
- ➢ Format:

```
AT+UARTFT{CR} or AT+UARTFT?{CR}
```

```
\label{eq:cr} \end{tabular} \end{tabular}
```

- Setting: AT+UARTFT=time{CR} {CR}{LF}OK{CR}{LF}
- > Parameters:
 - time: Packaging interval, the range is 100~60000ms, default is 100ms.
- \blacktriangleright E.g: AT+UARTFT=100.

7.2.27. AT+UARTFL

- > Function: Query/Setting serial port packaging length.
- ➢ Format:
 - AT+UARTFL{CR} or AT+UARTFL?{CR}
 - $\label{eq:cr} \end{tabular} \end{tabular}$
 - Setting:
 AT+UARTFL=length{CR}
 {CR}{LF}OK{CR}{LF}
- > Parameters:
 - length: Package length, ranging from 100 to 1000 bytes, default to 1000 bytes.
- ➢ E.g: AT+UARTFL =1000

7.2.28. AT+APN

- Function: Query/Setting APN code
- ➢ Format
 - Query current parameter:



AT+APN{CR} or AT+APN?{CR}

- {CR}{LF}+APN:code,user_name,password,auth{CR}{LF}
- Setting: AT+APN=code,user_name,password,auth{CR} {CR}{LF}OK{CR}{LF}
- > Parameters:
 - code: APN, default is AUTO, with a maximum length of 50.
 - user_name: User name, default is empty, maximum length 64.
 - password: Password, default empty, maximum length 127.
 - ◆ auth: Authentication mode, 0: None, 1: PAP, 2: CHAP, 3: PAP+CHAP, default is 0.
- E.g: AT+APN=4gnet,admin,admin,1.

7.2.29. AT+SOCKA

- > Function: Query/Setting the parameters of socket A.
- ➢ Format:
 - Query current parameter:
 - AT+SOCKA{CR} or AT+SOCKA?{CR}
 - {CR}{LF}+SOCKA:protocol,address,port{CR}{LF}
 - Setting:
 AT+SOCKA=protocol,address,port{CR}
 {CR}{LF}OK{CR}{LF}
- > Parameters:
- protocol: Connection Type, including:
 - TCPS: TCP Server
 - TCPC: TCP Client
 - UDPC: UDP Client
 - Default is TCPC.
- address: Server address. This address can be a domain name or IP. Default is test.usr.cn. It is invalid under TCPS. Can set any domain name or IP. Cannot be empty.
 - port: Server port, range 1~65535, default 2317, local port in TCPS mode
- E.g: AT+SOCKA=TCPC,test.usr.cn,8899.

7.2.30. AT+SOCKB

Function: Query/Setting the parameters of socket B.

- ➢ Function: Query/Setting the parameters of socket B.
- ➢ Format:
 - Query current parameter: AT+SOCKB{CR} or AT+SOCKB?{CR} {CR}{LF}+SOCKB:protocol,address,port{CR}{LF}
 - Setting: AT+SOCKB=protocol,address,port{CR} {CR}{LF}OK{CR}{LF}
- > Parameters:
 - protocol: protocol, including:



TCPC: TCP Client UDPC: UDP Client Default TCPC.

- address: Server address, this address can be domain name or IP, maximum support 100 bytes, default is test.usr.cn.
- ◆ port: Server port, range 1~65535, default 2317
- E.g: AT+SOCKB=TCPC,test.usr.cn,2317

7.2.31. AT+SOCKAEN

- Function: Query/Setting whether to enable socket A
- ➢ Format:
 - Query current parameter: AT+SOCKAEN{CR} or AT+SOCKAEN?{CR} {CR}{LF}+SOCKAEN:status{CR}{LF}
 - Setting: AT+SOCKAEN=status{CR} {CR}{LF}OK{CR}{LF}
- > Parameters:

status: whether to enable socket A, including:
 ON: enable.
 OFF: disable.

7.2.32. AT+SOCKBEN

- Function: Query/Setting whether to enable socket B.
- ➢ Format:
 - Query current parameter: AT+SOCKBEN{CR} or AT+SOCKBEN?{CR} {CR}{LF}+SOCKBEN:status{CR}{LF}
 - Setting: AT+SOCKBEN=status{CR} {CR}{LF}OK{CR}{LF}
- > Parameters:
 - status: whether to enable socket B, including:
 ON: enable.
 - OFF: disable

7.2.33. AT+SOCKALK

- ➢ Function: Query whether socket A is connected.
- ➢ Format:
 - Query current parameter:
 AT+SOCKALK{CR} or AT+SOCKALK?{CR} {CR}{LF}+SOCKALK:status{CR}{LF}
- > Parameters:
 - status: socket A connection status, including:



ON: connected. OFF: unconnected.

7.2.34. AT+SOCKBLK

- > Function: Query whether socket B is connected.
- ➢ Format:
 - Query current parameter:
 AT+SOCKBLK{CR} or AT+SOCKBLK?{CR} {CR}{LF}+SOCKBLK:status{CR}{LF}
- > Parameters:
 - status: socket B connection status, including:
 ON: connected.
 - OFF: unconnected.

7.2.35. AT+SOCKATO

- ➢ Function: Query/Setting reconnect time of Socket A once timeout.
- ➢ Format:
 - Query current parameter: AT+SOCKATO{CR} or AT+SOCKATO?{CR} {CR}{LF}+SOCKATO:time{CR}{LF}
- > Parameters:
 - ♦ time: reconnect time, time range is 1~100 s. Default time is 5s.
- ► E.g: AT+SOCKATO=10

7.2.36. AT+SOCKBTO

- ➢ Function: Query/Setting reconnect time of Socket B once timeout.
- ➢ Format:
 - Query current parameter: AT+SOCKBTO{CR} or AT+SOCKBTO?{CR} {CR}{LF}+SOCKBTO:time{CR}{LF}
- > Parameters:
 - time: reconnect time, time range is 1~100 s. Default time is 5s.

7.2.37. AT+SOCKRSTIM

- Function : Query/Setting the maximum number of re-connections after connection failure, device will restart after the maximum number of re-connections.
- ➢ Format:
 - Query current parameter:

AT+SOCKRSTIM{CR} or AT+ SOCKRSTIM?{CR}

- {CR}{LF}+ SOCKRSTIM:num{CR}{LF}
- Parameters:

num: Maximum re-connection times. Setting range is 10~600 times, default is 60 times.



7.2.38. AT+MODBUSEN

- > Function: Query/Setting whether to enable Modbus protocol conversion function.
- ➢ Format:
 - Query current parameter: AT+MODBUSEN{CR} or AT+MODBUSEN?{CR} {CR}{LF}+MODBUSEN:status{CR}{LF}
 Setting:
 - AT+MODBUSEN=status{CR} {CR}{LF}OK{CR}{LF}
- Parameters:

 status: Modbus protocol conversion function status, including: ON: enable
 OFF: disable

Default is OFF.

7.2.39. AT+REGEN

- > Function: Query/Setting whether to enable identity package.
- ➢ Format:
 - Query current parameter: AT+REGEN{CR} or AT+REGEN?{CR} {CR}{LF}+REGEN:status{CR}{LF}
 - Setting: AT+REGEN=status{CR} {CR}{LF}OK{CR}{LF}
- > Parameters:
 - status: identity package status, including:
 - ON: open.
 - OFF: close.

Default: OFF.

7.2.40. AT+REGTP

- ➢ Function: Query/Setting identity package type.
- ➢ Format:
 - Query current parameter: AT+REGTP{CR} or AT+REGTP?{CR} {CR}{LF}+REGTP:type{CR}{LF}
 - Setting: AT+REGTP=type{CR} {CR}{LF}OK{CR}{LF}
- > Parameters:
 - type: Identity package data type, including: ICCID: ICCID code.
 IMEI: IMEI code.



CLOUD: USR-cloud.

USER: User-defined data.

 $Default: USER_{\,\circ}$

➢ E.g: AT+REGTP =ICCID

7.2.41. AT+REGDT

- > Function: Query/Setting user-defined identity package data.
- ➢ Format:
 - Query current parameter: AT+REGDT{CR} or AT+REGDT?{CR} {CR}{LF}+REGDT:data{CR}{LF}
 - Setting: AT+REGDT=data{CR} {CR}{LF}OK{CR}{LF}
- > Parameters:
- ♦ data: User-defined identity package data, hexadecimal string format, maximum 160 bytes, 2 ~ 160 even bytes, default 777772E7573722E636E, with ASCII code for the expression of www.usr.cn.
 - Note: The maximum bytes is the number of bytes after ASCII code is converted to a hexadecimal string.
- ► E.g: AT+REGDT =7777772E7573722E636E

7.2.42. AT+REGSND

- > Function: Query/Setting the sending mode of the identity package.
- ➢ Format:
 - Query current parameter:
 AT+REGSND{CR} or AT+REGSND?{CR} {CR}{LF}+REGSND:type{CR}{LF}
 - Setting:
 AT+REGSND=type{CR}
 {CR}{LF}OK{CR}{LF}
- > Parameters:
 - type: Sending mode, including:
 - LINK: Sending when connection is established.

DATA: Identity package data as the beginning of each package data.

Default is DATA.

➢ E.g: AT+REGSND =DATA

7.2.43. AT+HEARTEN

- ➢ Function: Query/Setting whether to enable heartbeat package function.
- Format:
 - Query current parameter:
 AT+HEARTEN{CR} or AT+HEARTEN?{CR} {CR}{LF}+HEARTEN:status{CR}{LF}
 - Setting: AT+HEARTEN=status{CR}



${CR}{LF}OK{CR}{LF}$

```
> Parameters:
```

status: the status of heartbeat package, including;
 ON: open
 OFF: close

Default: ON.

7.2.44. AT+HEARTDT

- Function: Query/Setting heartbeat package data.
- ➢ Format:
 - Query current parameter: AT+HEARTDT{CR} or AT+HEARTDT?{CR} {CR}{LF}+HEARTDT:data{CR}{LF}
 - Setting: AT+HEARTDT=data{CR} {CR}{LF}OK{CR}{LF}
- > Parameters:

data: User custom heartbeat package data, hexadecimal string format, the maximum length is 160 bytes, $2 \sim 160$ even bytes, default is 777772E7573722E636E. E.g. data is 7777772E7573722E636E, in ASCII code is www.usr.cn.

Note:The maximum length of 160 bytes is the number of bytes after ASCII code is converted to a hexadecimal string.

► E.g: AT+HEARTDT =7777772E7573722E636E

7.2.45. AT+HEARTSND

- ➢ Function: Query/Setting the sending mode of heartbeat package.
- ➢ Format:
 - Query current parameter:
 AT+HEARTSND{CR} or AT+HEARTSND?{CR}
 {CR}{LF}+HEARTSND:type{CR}{LF}
 - Setting: AT+HEARTSND=type{CR} {CR}{LF}OK{CR}{LF}
- Parameters:
 - type: sending mode, including:
 - COM: Send heartbeat package to serial port.
 - NET: Send heartbeat packet to network side.

Default is NET $_{\circ}$

➢ E.g: AT+HEARTSND =COM

7.2.46. AT+HEARTTM

- Function: Query/Setting the interval time of heartbeat package.
- ➢ Format:
 - Query current parameter:



```
AT+HEARTTM{CR} or AT+HEARTTM?{CR}
{CR}{LF}+HEARTTM:time{CR}{LF}
```

- Setting: AT+HEARTTM=time{CR} {CR}{LF}OK{CR}{LF}
- > Parameters:
 - ◆ time: sending interval time, range is 1 ~ 6000s, default is 30s.
- ► E.g: AT+HEARTTM=60

7.2.47. AT+HTPTP

- ▶ Function: Query/Setting HTTP request type.
- Format:
 - Query current parameter:
 AT+HTPTP{CR} or AT+HTPTP?{CR}
 {CR}{LF}+HTPTP:type{CR}{LF}
 - Setting:
 AT+HTPTP=type{CR}
 {CR}{LF}OK{CR}{LF}
- Parameters:
 - type: HTTP request type, including:
 GET
 POST

Default is GET.

► E.g: AT+HTPTP=POST

7.2.48. AT+HTPURL

- Function: Query/Setting HTTP URL
- Format:
 - Query current parameter:
 AT+HTPURL{CR} or AT+HTPURL?{CR} {CR}{LF}+HTPURL:URL{CR}{LF}
 - Setting:
 AT+HTPURL=URL{CR}
 {CR}{LF}OK{CR}{LF}

```
> Parameters:
```

URL: HTTP URL, Maximum 100 bytes, default is /1.php[3F], please refer to the chapter of "Special Symbol" for the escaping rules.

E.g: AT+HTPURL=/1.php[3F]

7.2.49. AT+HTPSV

- ➢ Function: Query/Setting HTTP server parameters.
- ➢ Format:





```
    Query current parameter:
AT+HTPSV{CR} or AT+HTPSV?{CR}
{CR}{LF}+HTPSV:address,port{CR}{LF}
```

- Setting: AT+HTPSV=address,port{CR} {CR}{LF}OK{CR}{LF}
- Parameters:
 - address: Server address, can be domain name or IP address. Maximum 100 bytes, default is test.usr.cn.
 - port: Server port, can be set from 1-65535, default is 80.
- E.g: AT+HTPSV=test.usr.cn,80

7.2.50. AT+HTPHD

- > Function: Query/Setting HTTP request header.
 - Format: AT+HTPHD{CR} or AT+HTPHD?{CR} {CR}{LF}+HTPHD:head{CR}{LF}
 - Setting: AT+HTPHD=head{CR} {CR}{LF}OK{CR}{LF}
- > Parameters:
- ♦ head : HTTP request header, range from 9 to 200 bytes, must end with[0D][0A]. Default is Connection:close[0D][0A], please refer to the chapter of "Special Symbol" for the escaping rules.
- E.g: AT+HTPHD=Connection:close[0D][0A]

7.2.51. AT+HTPTO

- ➢ Function: Query/Setting HTTP request over time.
- ➢ Format:
 - Query current parameter: AT+HTPTO{CR} or AT+HTPTO?{CR} {CR}{LF}+HTPTO:time{CR}{LF}
 - Setting: AT+HTPTO=time{CR} {CR}{LF}OK{CR}{LF}
- > Parameters:
 - time: HTTP request over time, range is 1-600s, default is 10s.
- E.g: AT+HTPTO=60

7.2.52. AT+HTPFLT

- Function: Query/Setting whether to enable filter HTTP header.
- ➢ Format:
 - Query current parameter:



AT+HTPFLT{CR} or AT+HTPFLT?{CR} {CR}{LF}+HTPFLT:status{CR}{LF}

- Setting: AT+HTPFLT=status{CR} {CR}{LF}OK{CR}{LF}
- > Parameters:
 - status: Whether to enable filter HTTP header.
 ON: enable.
 OFF: disable.
 Default is on.
- ► E.g: AT+HTPFLT=OFF

7.2.53. AT+DSTNUM

- > Function: Query/Setting the target mobile phone number for SMS mode.
- ➢ Format:
 - ♦ Query:

```
AT+DSTNUM{CR} or AT+DSTNUM?{CR}
{CR}{LF}+DSTNUM: number{CR}{LF}
```

- Setting:
 AT+DSTNUM=number{CR}
 {CR}{LF}OK{CR}{LF}
- > Parameters:
 - number: SMS target phone number, please add international number, default number is 4000255652, up to 20 bytes.

7.2.54. AT+SMSFLT

- ▶ Function: Query/Setting whether to enable only receive SMS from source number.
- ➢ Format:
 - Query:
 AT+SMSFLT{CR} or AT+SMSFLT?{CR}
 {CR}{LF}+SMSFLT: status{CR}{LF}
 - ♦ Setting:

AT+SMSFLT=status{CR}

{CR}{LF}OK{CR}{LF}

- > Parameters:
 - ♦ Status:
 - ON: enable.

OFF: disable.

Default : ON_{\circ}

► E.g: AT+SMSFLT=ON

7.2.55. AT+CISMSSEND

➢ Function: Sending SMS.



- Format:
 - Setting: AT+CISMSSEND=number,data{CR}

{CR}{LF}OK{CR}{LF}

- Parameters:

8. Contact Us

Company: Jinan USR IOT Technology Limited

Address: Floor 11, Building 1, No. 1166 Xinluo Street, Gaoxin District, Jinan, Shandong, 250101, China Website: www.pusr.com

Support: h.usriot.com Email:sales@usriot.com Tel: 86-531-88826739

9. Disclaimer

This document provides the information of USR-G786-G products, it hasn't been granted any intellectual property license by forbidding speak or other ways either explicitly or implicitly. Except the duty declared in sales terms and conditions, we don't take any other responsibilities. We don't warrant the products sales and use explicitly or implicitly, including particular purpose merchant ability and marketability, the tort liability of any other patent right, copyright, intellectual property right. We may modify specification and description at any time without prior notice.

10. Update History

2020-03-23 V1.0.1. established.

2020-11-20 V1.0.3. established. Update the description by Dean, Gao