



1: mobile phones connect WiFi AP module: USR-WiFi232-T

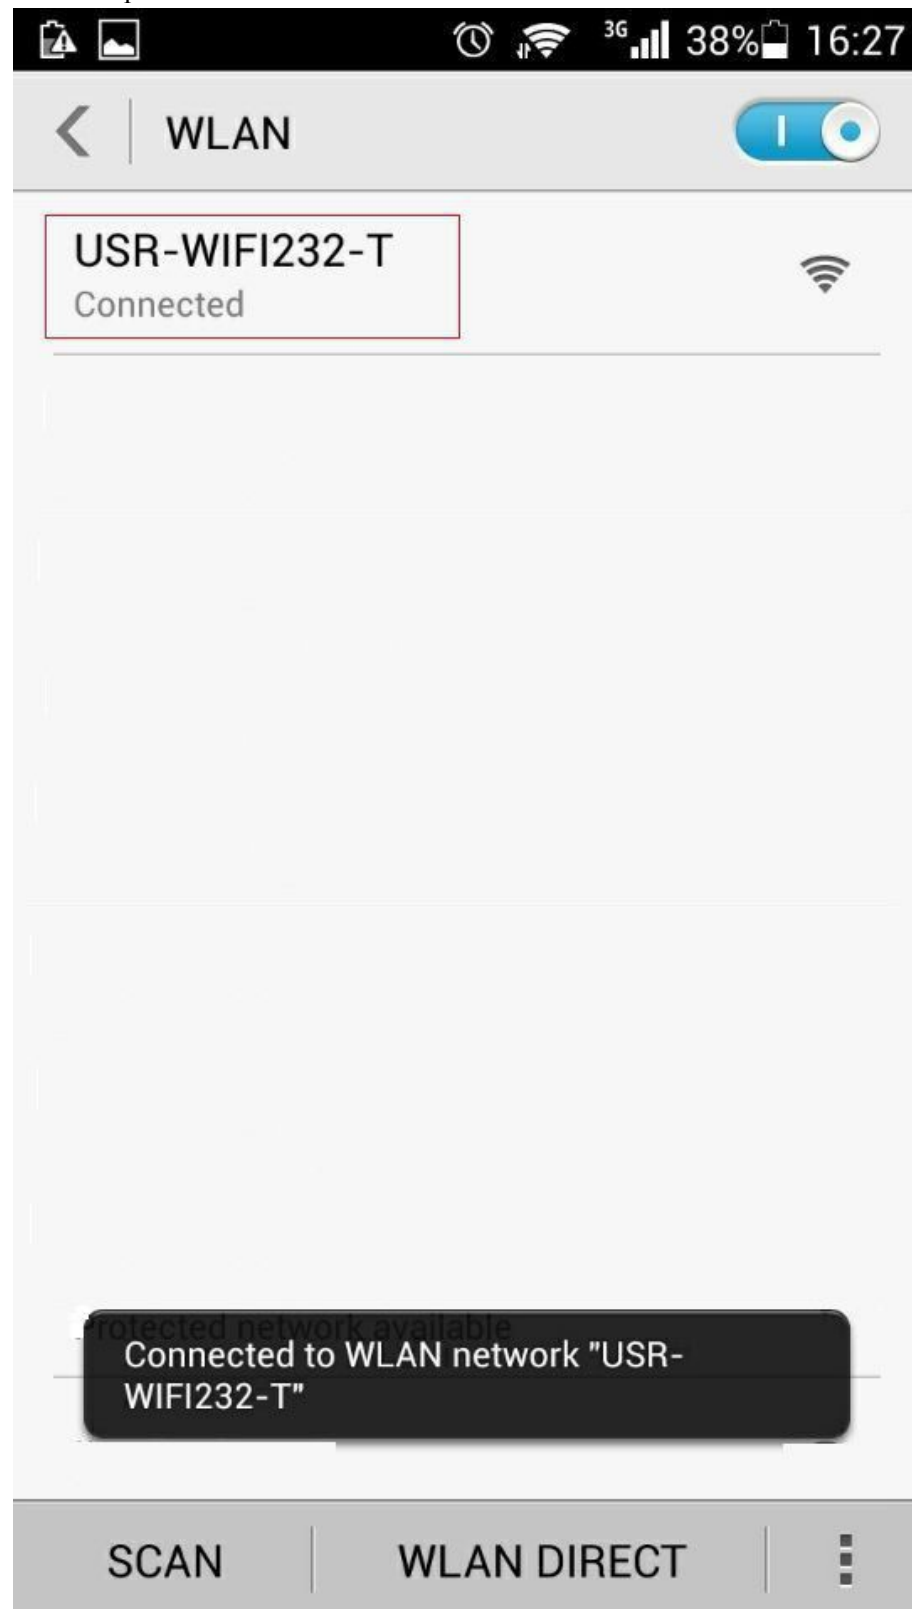

2: Open the software : usr-auto-link

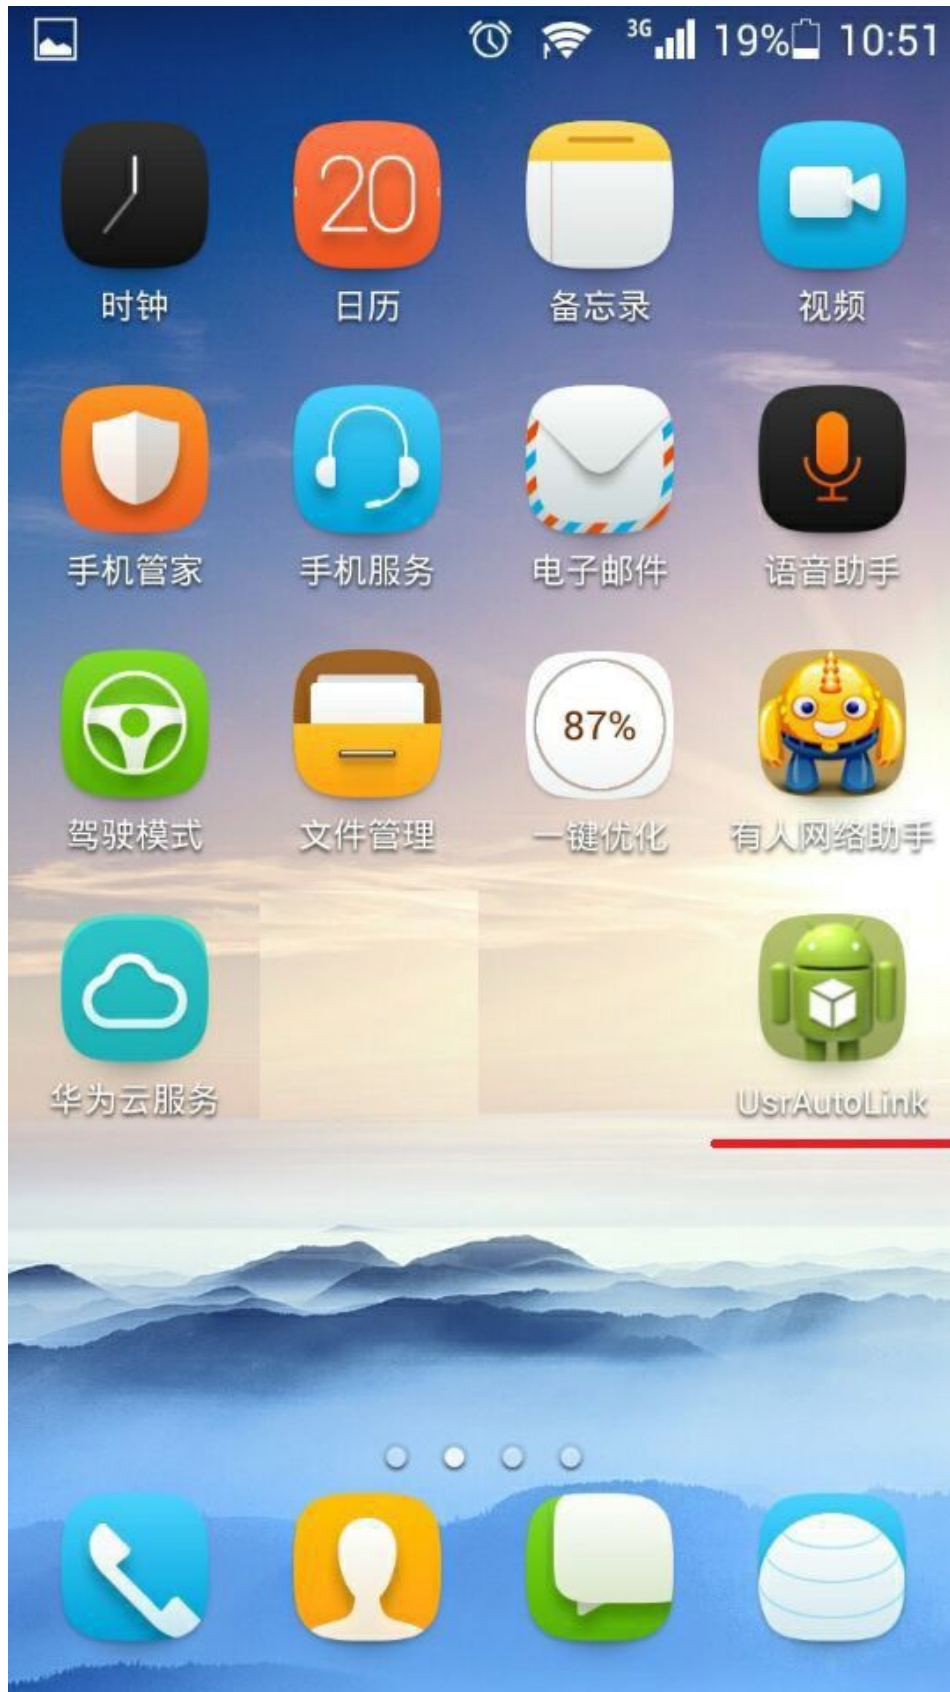

3: search



ssid




password

49000

ok

4: Choose the ssid

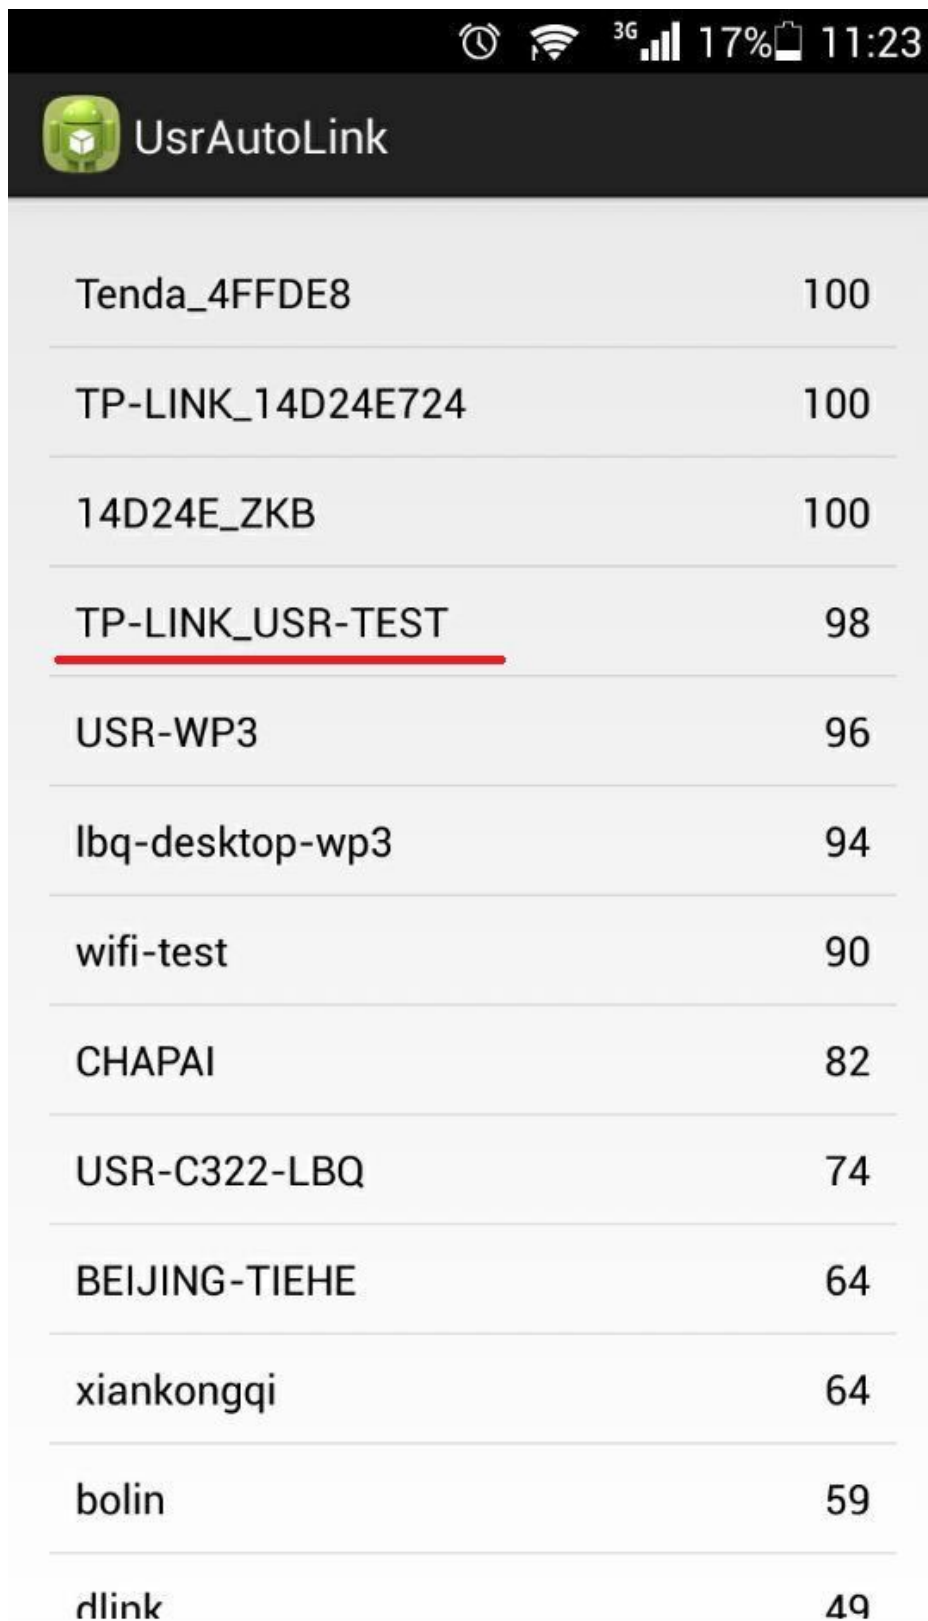

The screenshot shows the UsrAutoLink application interface. At the top, there is a status bar with icons for alarm, Wi-Fi, 3G signal, battery level at 17%, and the time 11:23. Below the status bar is a header with the UsrAutoLink logo and name. The main content is a list of Wi-Fi networks with their SSIDs and signal strength values. The network 'TP-LINK\_USR-TEST' is highlighted with a red underline.

SSID	Signal Strength
Tenda_4FFDE8	100
TP-LINK_14D24E724	100
14D24E_ZKB	100
<u>TP-LINK_USR-TEST</u>	98
USR-WP3	96
lbq-desktop-wp3	94
wifi-test	90
CHAPAI	82
USR-C322-LBQ	74
BEIJING-TIEHE	64
xiankongqi	64
bolin	59
dlink	49

5: Enter the password




TP-LINK\_USR-TEST

www.usr.cn

ok



6: :OK

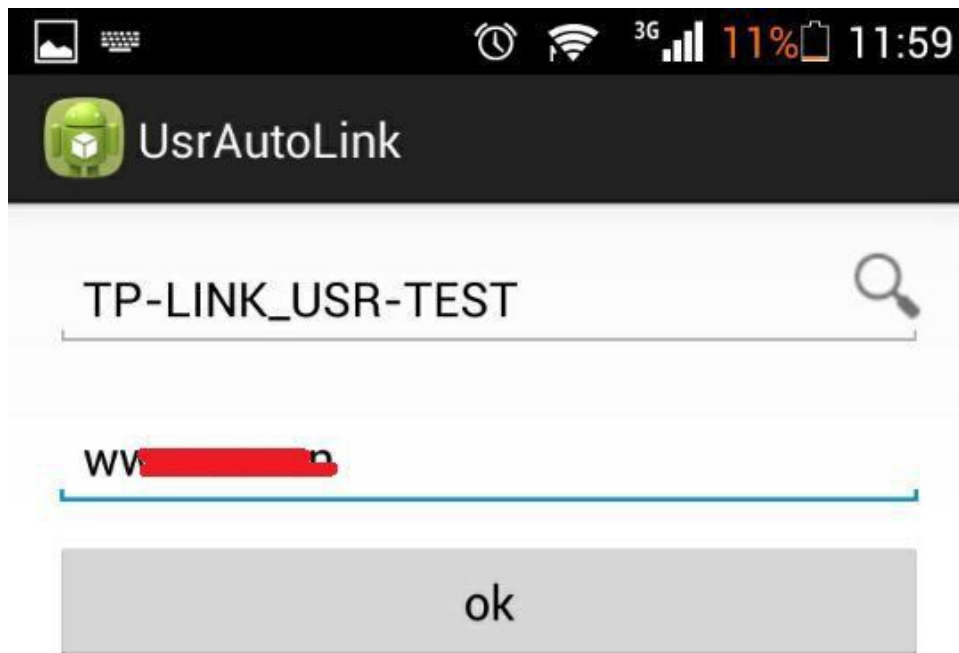

Module after the restart, module of the link lights, representative can connect to the WiFi router.

7: search module connected to the router after obtaining IP  
Computer connection module to connect the router,



Search IP:

